



# **ENERGY STORAGE SYSTEM**

## **4.2KW/6.2KW**



**Please read all instructions carefully before use and keep the manual for future use.**

**VERSION: 1.0**

# Table Of Contents

<b>1.ABOUT THIS MANUAL .....</b>	<b>2</b>
1.1 PURPOSE.....	2
1.2 SCOPE .....	2
<b>2.SAFETY INSTRUCTIONS .....</b>	<b>2</b>
<b>3.INTRODUCTION .....</b>	<b>3</b>
3.1 FEATURES .....	3
3.2 BASIC SYSTEM ARCHITECTURE .....	3
3.3 PRODUCT OVERVIEW.....	4
<b>4.INSTALLATION .....</b>	<b>5</b>
4.1 UNPACKING AND INSPECTION .....	5
4.2 PREPARATION .....	5
4.3 MOUNTING THE UNIT .....	5
4.4 BATTERY CONNECTION .....	5
4.5 AC INPUT/OUTPUT CONNECTION.....	7
4.6 PV CONNECTION .....	8
4.7 FINAL ASSEMBLY .....	9
4.8 COMMUNICATION CONNECTION.....	10
<b>5.OPERATION .....</b>	<b>16</b>
5.1 POWER ON/OFF .....	16
5.2 OPERATION AND DISPLAY PANEL.....	16
5.3 LCD DISPLAY ICONS.....	17
5.4 LCD SETTING .....	19
5.5 DISPLAY SETTING.....	29
5.6 OPERATING MODE DESCRIPTION .....	30
5.7 BATTERY EQUALIZATION DESCRIPTION .....	32
5.8 MAINS AND LITHIUM BATTERY ACTIVATION FUNCTION .....	33
5.9 FAULT REFERENCE CODE.....	34
5.10 WARNING INDICATOR .....	34
<b>6.CLEARANCE AND MAINTENANCE FOR ANTI-DUST KIT .....</b>	<b>35</b>
6.1 OVERVIEW .....	35
6.2 CLEARANCE AND MAINTENANCE.....	35
<b>7.SPECIFICATIONS.....</b>	<b>36</b>
TABLE 1 LINE MODE SPECIFICATIONS.....	36
TABLE 2 INVERTER MODE SPECIFICATIONS.....	37
TABLE 3 TWO LOAD OUTPUT POWER .....	37
TABLE 4 CHARGE MODE SPECIFICATIONS .....	38
TABLE 5 GRID-TIE OPERATION .....	38
TABLE 6 GENERAL SPECIFICATIONS.....	38
<b>8.TROUBLE SHOOTING .....</b>	<b>39</b>
<b>9.APPENDIX: APPROXIMATE BACK-UP TIME TABLE.....</b>	<b>40</b>

# 1 ABOUT THIS MANUAL

## 1.1 Purpose

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations. Keep this manual for future reference.

## 1.2 Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

# 2 SAFETY INSTRUCTIONS



**WARNING: This chapter contains important safety and operating instructions. Read and keep this manual for future reference.**

1. Before using the unit, read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
2. **CAUTION** --To reduce risk of injury, charge only deep-cycle lithium type rechargeable batteries. Other types of batteries may burst, causing personal injury and damage.
3. Do not disassemble the unit. Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
4. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
5. **CAUTION** – Only qualified personnel can install this device with battery.
6. **NEVER** charge a frozen battery.
7. For optimum operation of this inverter/charger, please follow required spec to select appropriate cable size. It's very important to correctly operate this inverter/charger.
8. Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion.
9. Please strictly follow installation procedure when you want to disconnect AC or DC terminals. Please refer to INSTALLATION section of this manual for the details.
10. One piece of 150A fuse is provided as over-current protection for the battery supply.
11. **GROUNDING INSTRUCTIONS** -This inverter/charger should be connected to a permanent grounded wiring system. Be sure to comply with local requirements and regulation to install this inverter.
12. **NEVER** cause AC output and DC input short circuited. Do NOT connect to the mains when DC input short circuits.
13. **Warning!!** Only qualified service persons are able to service this device. If errors still persist after following troubleshooting table, please send this inverter/charger back to local dealer or service center for maintenance.

### 3 INTRODUCTION

This is a multi-function inverter/charger, combining functions of inverter, solar charger and battery charger to offer uninterruptible power support with portable size. Its comprehensive LCD display offers user-configurable and easy-accessible button operation such as battery charging current, AC/solar charger priority, and acceptable input voltage based on different applications.

#### 3.1 Features

- ☑ Pure sine wave inverter
- ☑ Configurable input voltage range for home appliances and personal computers via LCD setting
- ☑ Configurable battery charging current based on applications via LCD setting
- ☑ Configurable AC/Solar Charger priority via LCD setting
- ☑ Compatible to mains voltage or generator power
- ☑ Auto restart while AC is recovering
- ☑ Overload/ Over temperature/ short circuit protection
- ☑ Smart battery charger design for optimized battery performance
- ☑ Cold start function

#### 3.2 Basic System Architecture

The following illustration shows basic application for this inverter/charger. It also includes following devices to have a complete running system:

- ☑ Generator or Utility.
- ☑ PV modules

Consult with your system integrator for other possible system architectures depending on your requirements. This inverter can power all kinds of appliances in home or office environment, including motor-type appliances such as tube light, fan, refrigerator and air conditioner.


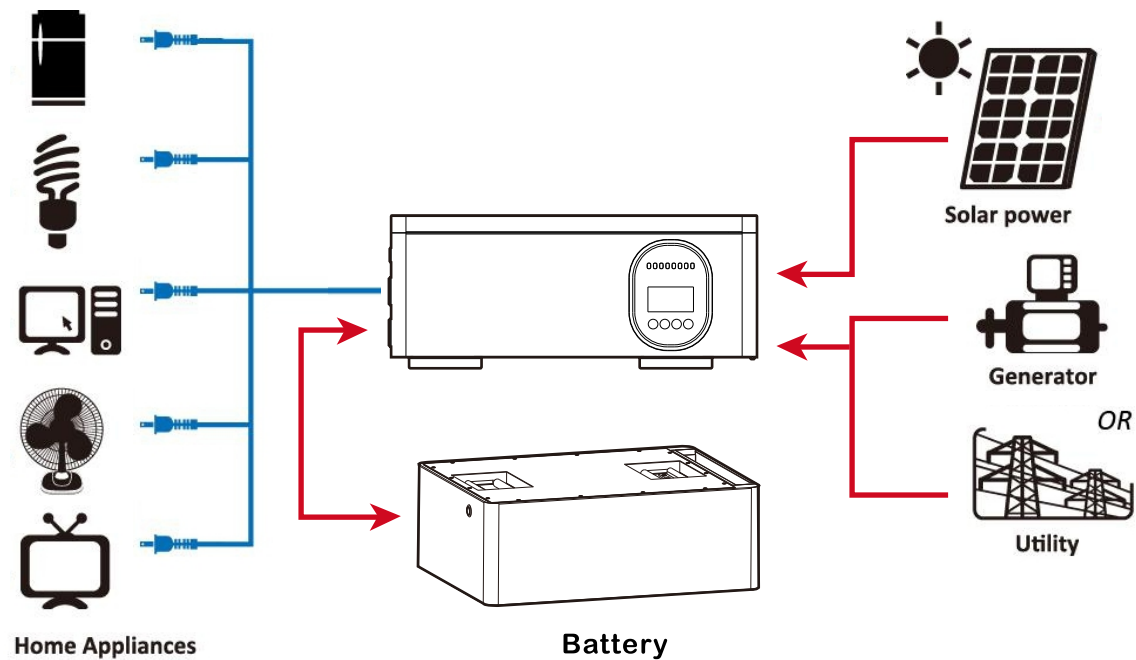


Figure 1 Hybrid Power System



### 3.3 Product Overview

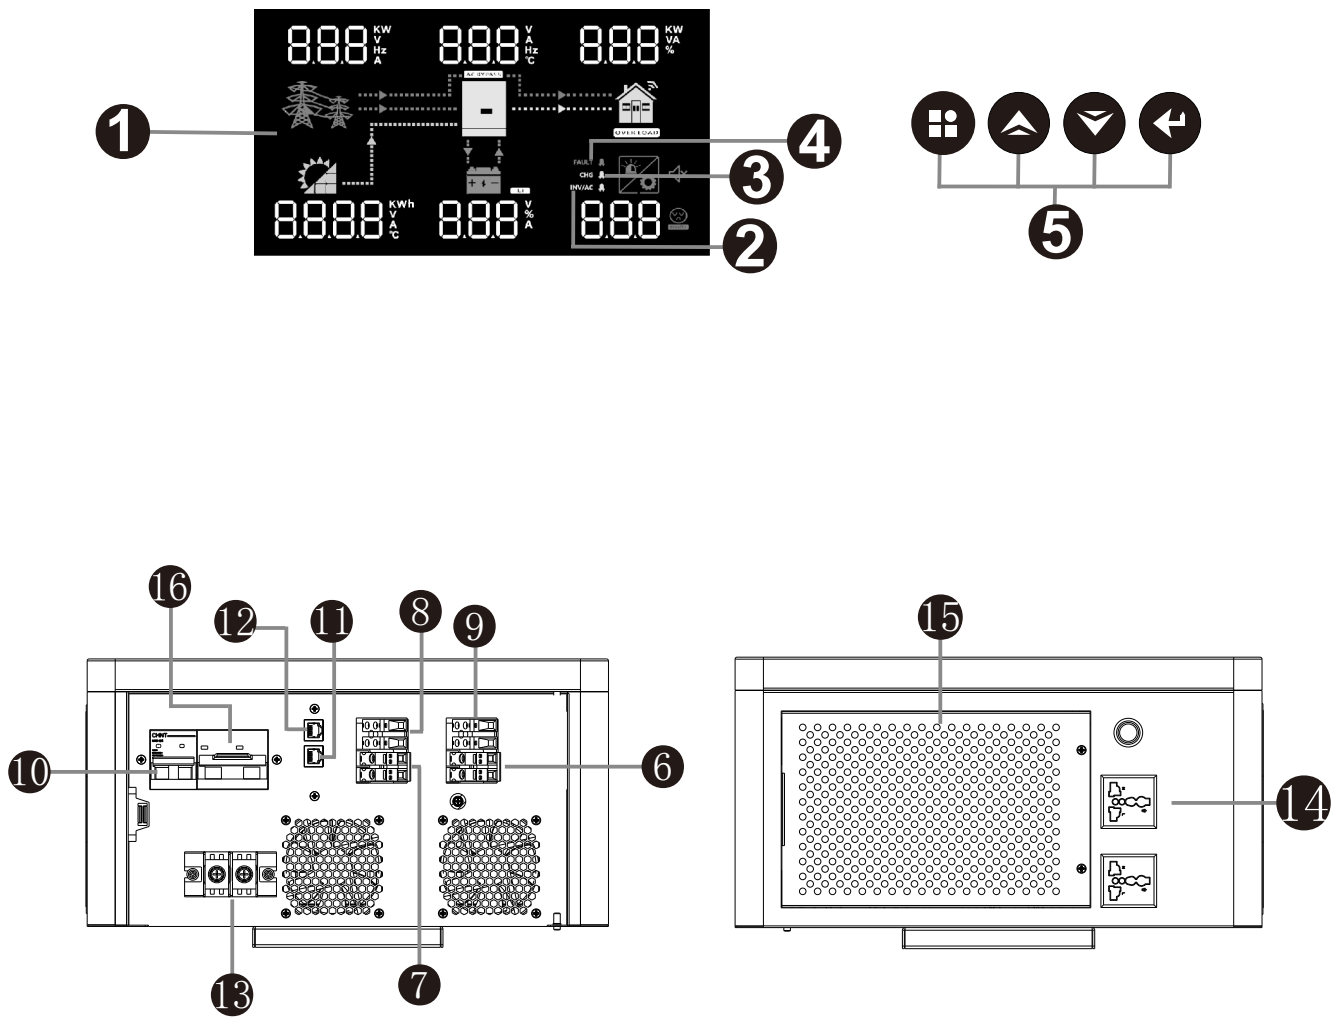

1.LCD

2.Status i indicator

3.Charging indicator

4.Fault i indicator

5.Function buttons

6.AC input

7.Main output

8.Second output

9.PV input

10. AC IN switch

11.WIFI communication/RS-232 port

12.Battery communication/RS-485 port

13. Battery input

14.Output receptacles

15.Anti dust kit

16.Battery switch

## 4 INSTALLATION

### 4.1 Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:

- ☑ The unit x 1
- ☑ User manual x 1
- ☑ Battery wire x 2

### 4.2 Preparation

Before connecting all lines, remove the screws under the machine and remove the bottom cover plate.

### 4.3 Mounting the Unit

Consider the following points before selecting where to install:

- ⌘ Do not mount the inverter on flammable construction materials.
- ⌘ Mount on a solid surface
- ⌘ Install this inverter at eye level in order to allow the LCD display to be read at all times.
- ⌘ For proper air circulation to dissipate heat, allow a clearance of approx. 20 cm to the side and approx. 50 cm above and below the unit.
- ⌘ The ambient temperature should be between 0°C and 55°C to ensure optimal operation.
- ⌘ The recommended installation position is to be adhered to the wall vertically.
- ⌘ Make sure that other objects and surfaces are left with enough space from the machine to ensure adequate heat dissipation and that there is enough room to remove the wires.



**SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY.**

Install the unit by screwing two screws. It's recommended to use M6 screws.

### 4.4 Battery Connection

**CAUTION:** For safety operation and regulation compliance, it's requested to install a separate DC over-current protector or disconnect device between battery and inverter. It may not be requested to have a disconnect device in some applications, however, it's still requested to have over-current protection installed. Please refer to typical amperage in below table as required fuse or breaker size.

**WARNING!** All wiring must be performed by a qualified personnel.


**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for battery connection. To reduce risk of injury, please use the proper recommended cable as below.

**Recommended battery cable size:**


Model	Wire Size	Cable (mm <sup>2</sup> )	Torque value (max)
4.2KW/6.2KW	1 x 2AWG	25	12 Nm

Please follow below steps to implement battery connection:

1. Remove insulation sleeve 18 mm for positive and negative conductors.
2. Suggest to put bootlace ferrules on the end of positive and negative wires with a proper crimping tool.

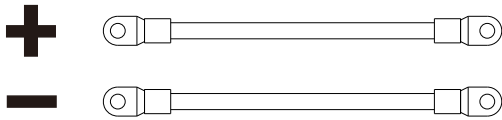


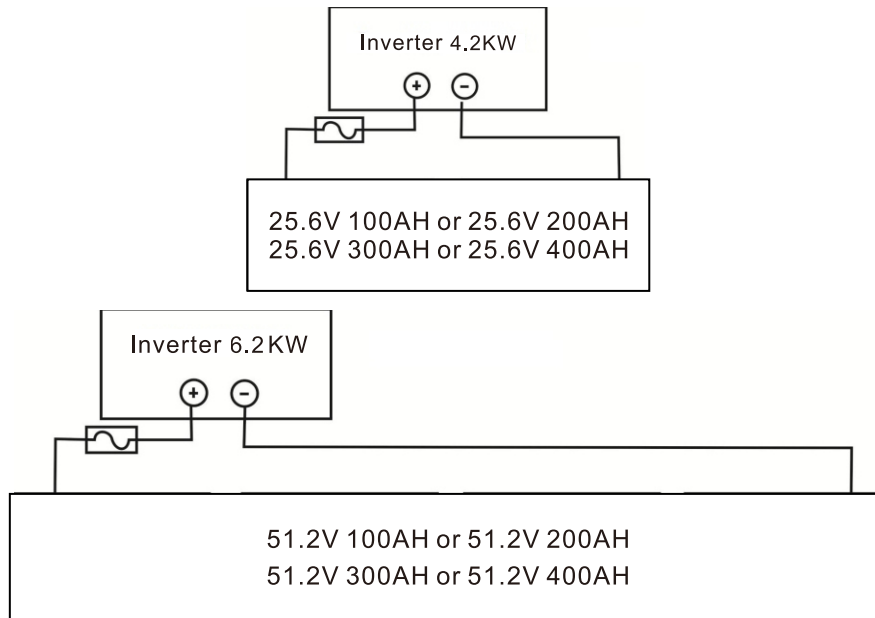

3. Connect all battery packs as below chart.



4. Insert the battery wires flatly into battery connectors of inverter and make sure the bolts are tightened with torque of 10Nm in clockwise direction. Make sure polarity at both the battery and the inverter/charge is correctly connected and conductors are tightly screwed into the battery terminals.

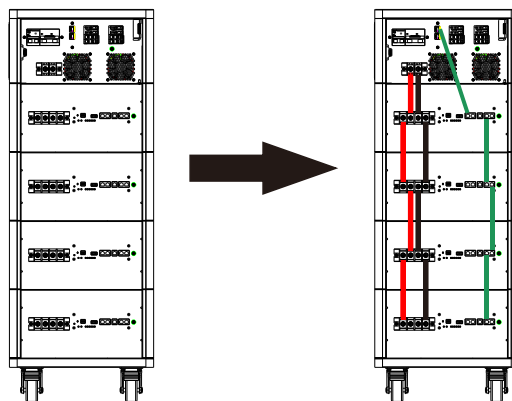Recommended tool: #2 Pozi Screwdriver



	<b>WARNING: Shock Hazard</b> Installation must be performed with care due to high battery voltage in series.
	<b>CAUTION!!</b> Before making the final DC connection or closing DC breaker/disconnector, be sure positive (+) must be connected to positive (+) and negative (-) must be connected to negative (-).

## 4.5 AC Input/Output Connection

**CAUTION!!** There are two terminal blocks with "IN" and "OUT" markings. Please do NOT mis-connect input and output connectors.

**WARNING!** All wiring must be performed by a qualified personnel.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable size as below.

### Suggested cable requirement for AC wires


Model	Gauge	Cable (mm <sup>2</sup> )	Torque Value (max)
4.2KW	12 AWG	4	5 Nm
6.2KW	10 AWG	6	5 Nm

Please follow below steps to implement AC input/output connection:

1. Before making AC input/output connection, be sure to open DC protector or disconnecter first.
2. Remove insulation sleeve 10mm for six conductors. And shorten phase L and neutral conductor N 3 mm.
3. Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws.

**L→LINE (brown or black)**

**N→Neutral (blue)**

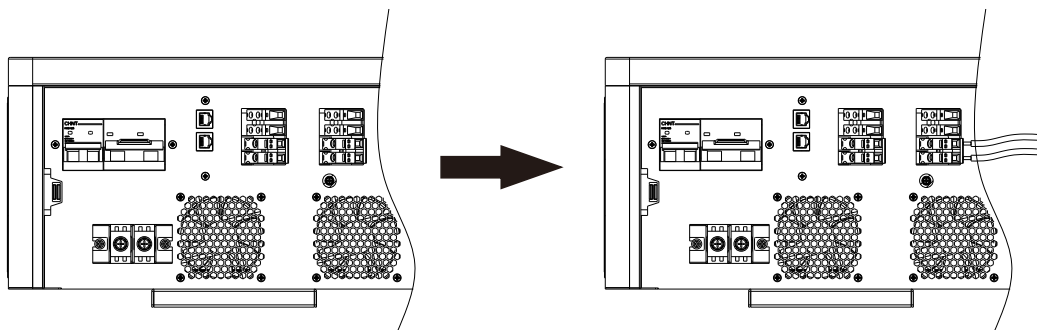


### WARNING:

Be sure that AC power source is disconnected before attempting to hardwire it to the unit.

4. Then, insert AC output wires according to polarities indicated on terminal block and tighten terminal screws.

**L→LINE (brown or black)**


**N→Neutral (blue)**

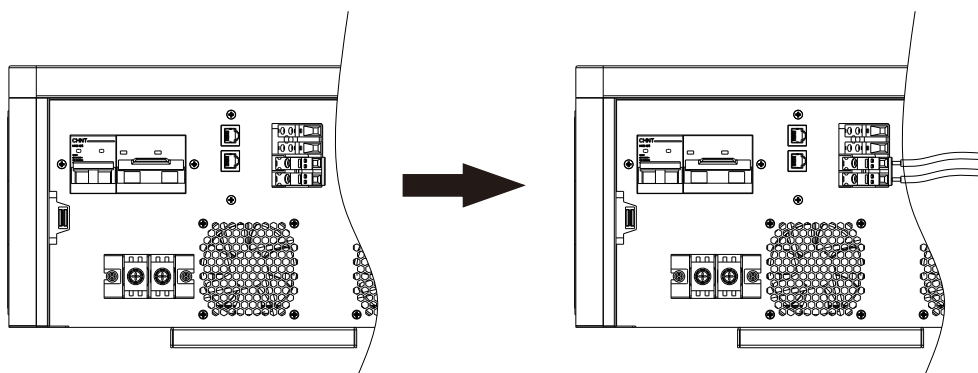

5. Then, insert AC output wires according to polarities indicated on terminal block and tighten terminal screws.

**L→LINE (brown or black)**

**N→Neutral (blue)**

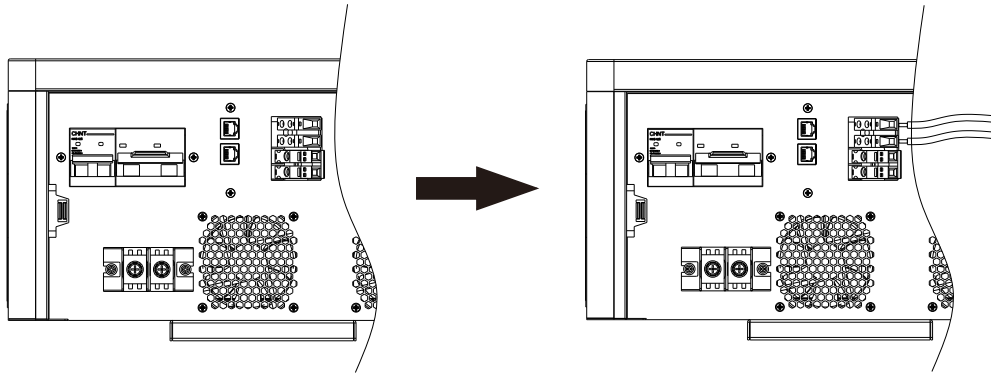

6. Make sure the wires are securely connected.

**CAUTION:** Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it's equipped with time-delay function before installation. Otherwise, this inverter/charger will trig overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.

#### 4.6 PV Connection

**CAUTION:** Before connecting to PV modules, please install **separately** a DC circuit breaker between inverter and PV modules.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below.

Model	Wire Size	Cable (mm <sup>2</sup> )	Torque value (max)
4.2KW/6.2KW	1 x 12AWG	4	5 Nm

#### PV Module Selection:

When selecting proper PV modules, please be sure to consider below parameters:

1. Open circuit Voltage (Voc) of PV modules not exceeds max. PV array open circuit voltage of inverter.
2. Open circuit Voltage (Voc) of PV modules should be higher than min. battery voltage.

INVERTER MODEL	4.2KW	6.2KW
Max. PV Array Open Circuit Voltage	500Vdc	
PV Array MPPT Voltage Range	60Vdc~ 500Vdc	


Take 250Wp PV module as an example. After considering above two parameters, the recommended module configurations are listed as below table.

Solar Panel Spec. (reference) - 250Wp - Vmp: 30.1Vdc - Imp: 8.3A - Voc: 37.7Vdc - Isc: 8.4A - Cells: 60	SOLAR INPUT	Q'ty of panels	Total input power
	(Min in serial: 6 pcs, max. in serial: 13 pcs)		
	6 pcs in serial	6 pcs	1500W
	8 pcs in serial	8 pcs	2000W
	12 pcs in serial	12 pcs	3000W
	13 pcs in serial	13 pcs	3250W
	8 pieces in serial and 2 sets in parallel	16 pcs	4000W
	10 pieces in serial and 2 sets in parallel	20 pcs	5000W
	10 pieces in serial and 2 sets in parallel	20 pcs	6200W
	12 pieces in serial and 2 sets in parallel	24 pcs	6500W
	10 pieces in serial and 3 sets in parallel	30 pcs	7500W

### PV Module Wire Connection


Please follow below steps to implement PV module connection:

1. Remove insulation sleeve 10 mm for positive and negative conductors.
2. Suggest to put bootlace ferrules on the end of positive and negative wires with a proper crimping tool.

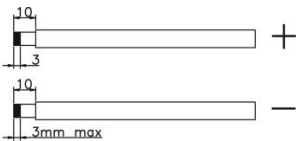

3. Check correct polarity of wire connection from PV modules and PV input connectors. Then, connect positive pole (+) of connection wire to positive pole (+) of PV input connector. Connect negative pole (-) of connection wire to negative pole (-) of PV input connector.


Recommended tool: 4mm blade screwdriver

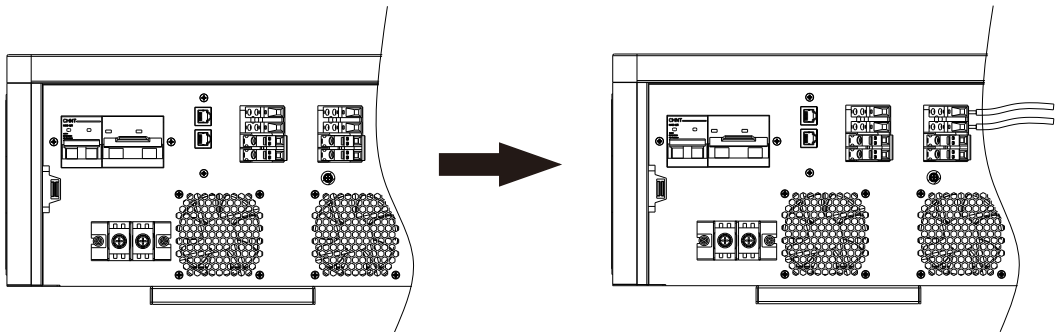


### 4.7 Final Assembly

After connecting all wirings, please put bottom cover back by screwing two screws as shown below.


1. Install the battery pack on the base with wheels

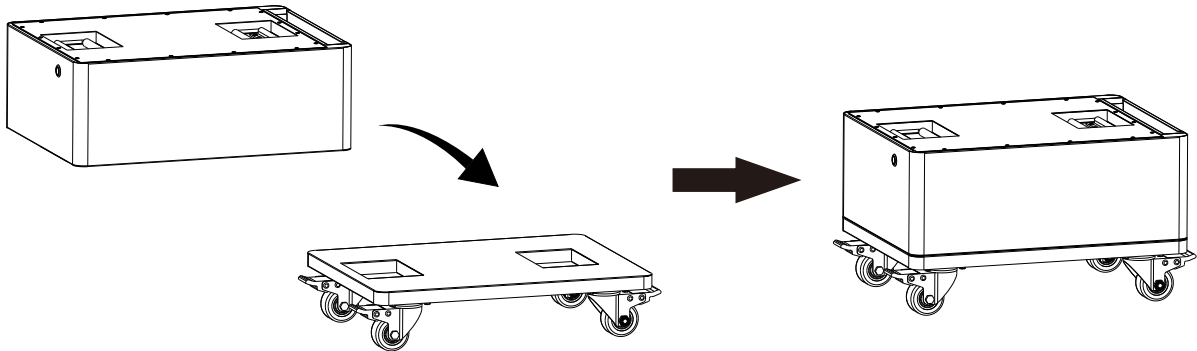

## 2.To assemble the second battery

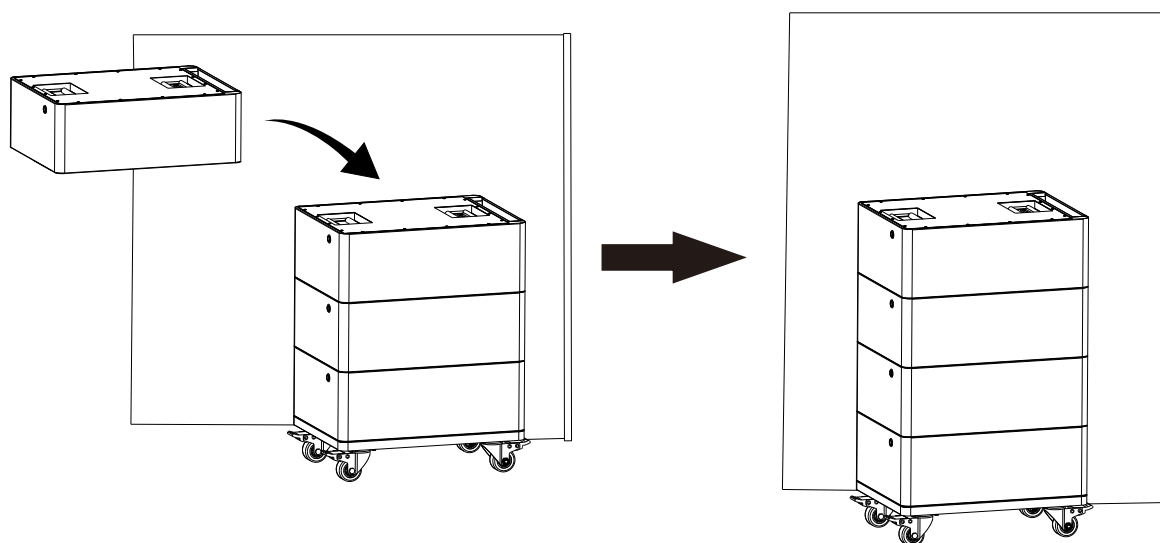

## 3. Inverter Installation

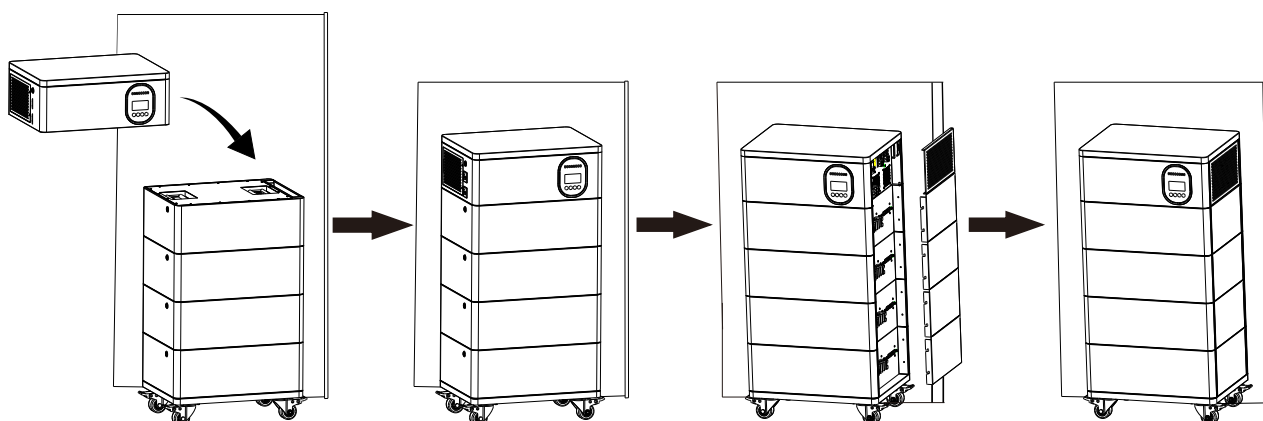

## 4.8 Communication Connection

### 1. Wi-Fi cloud communication (option):

Please use supplied communication cable to connect to inverter and Wi-Fi module. Download APP and installed from APP store, and Refer to "Wi-Fi Plug Quick Installation Guideline" to set up network and registering. The inverter status would be shown by mobile phone APP or webpage of computer.

### 2. GPRS cloud communication (option):


Please use supplied communication cable to connect to inverter and GPRS module, and then applied external power to GPRS module. Download APP and installed from APP store, and Refer to "GPRS RTU Quick Installation Guideline" to set up network and registering. The inverter status would be shown by mobile phone APP or webpage of computer.

3.Battery communication


The communication between the battery and the inverter can be realized through the battery communication interface, so that the inverter and the lithium battery can exchange information ( Baud rate : 9600 ).

4.Lithium battery and inverter connection:



Use power cables, communication cables for lithium batteries, and inverters to connect.  
Note:Lithium battery and inverter positive and negative positions, check the correct installation;The RJ45 connector of the communication cable connects to the BMS port of the inverter, and the other RJ45 connector connects to the RS485 port of the lithium battery;Before connecting, make sure that the lithium battery and inverter are turned off.

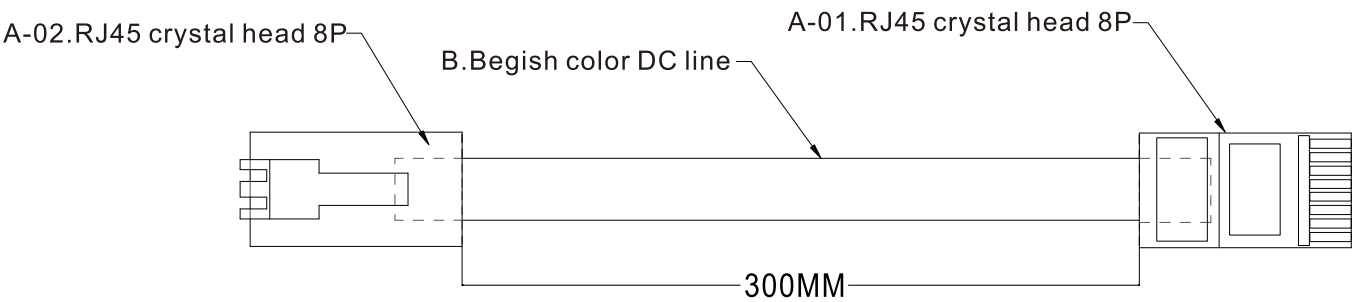

CONNECTION METHOD	
A-01	A-02
1	7
2	8
8	6
EMPTY PIN IS NOT CONNECTED	

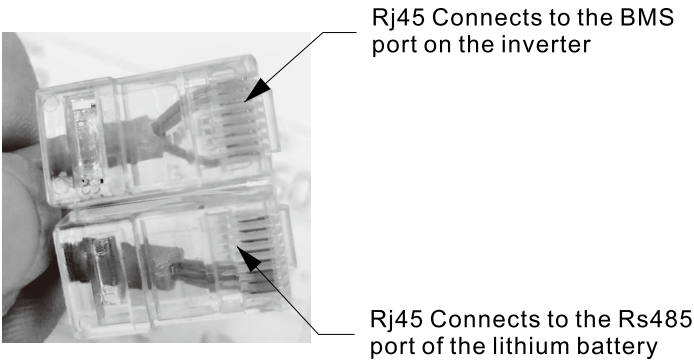

The lithium battery communication cable interface is shown in the figure

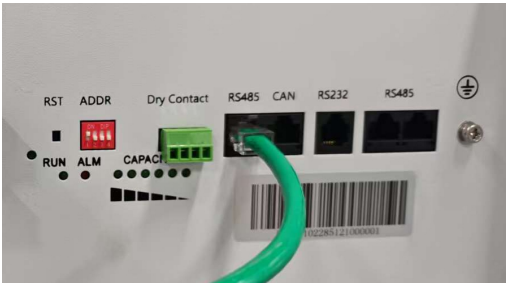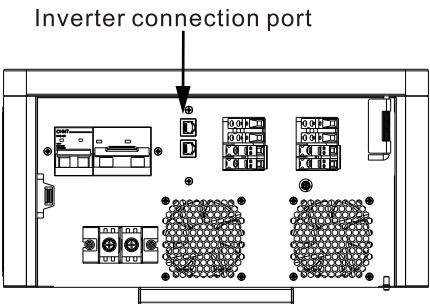

Lithium battery connection diagram



In order to communicate with the lithium battery BMS, you should press the “ENTER” button for a long time, and set the battery type as “LIB-485” in program 05. Then select the matching battery protocol in Program 43.







05	Battery type	AGM (default) 05 <u>AGM</u>
		Flooded 05 <u>FLD</u>
		User Defined 05 <u>USE</u>
		Lithium battery mode 05 <u>LIB</u>
		Lithium battery communication mode LIB 05 <u>485</u>
43	Lithium battery protocol	PYLON 43 <u>PYL</u>
		PACE 43 <u>PAC</u>

**CAUTION:** When the battery type is set to “LIB-485”, the setting items 12, 13 and 29 are displayed in percentage.















**CAUTION:** When the battery type is set to “LIB-485”, the user cannot modify the maximum charging current. When communication fails, the inverter will cut off the output.

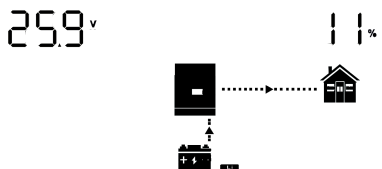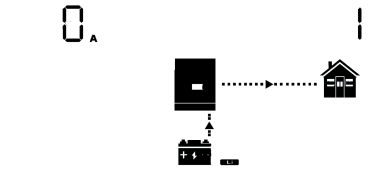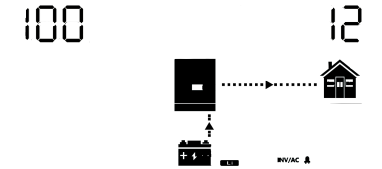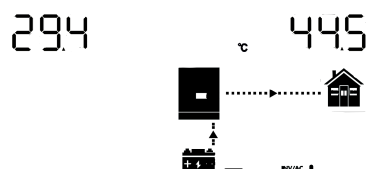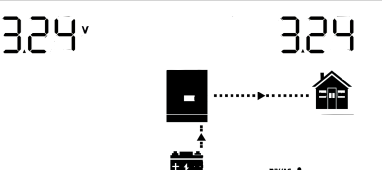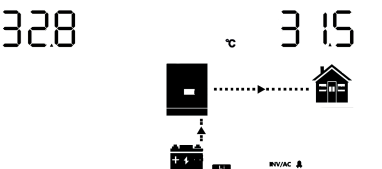12	When the SBU mode is selected in program 01, the battery SOC point for switching to the utility source input can be set.	12 <u>50</u> % The default value is 50%, and 10% ~ 50% can be set.
13	When the SBU mode is selected in program 01, the SOC point for switching to the battery mode can be set.	13 <u>95</u> % The default value is 95%, and 30% ~ 100% can be set.
29	If "LIB-485" is selected in item 05. you can set the battery low SOC shutdown point.	29 <u>20</u> % The default value is 20%, and 5% ~ 30% can be set.




In “LIB-485” mode,press and hold the “ESC” button to view the information of the lithium battery, and the inverter display screen will enter the following screen (the intial interface shows the toral battery voltage and remaining battery capacity). Press the “DOWN” button to display the following data in turn.




















Selectable information		LCD display
The data is displayed in the upper left corner of the LCD	The data is displayed in the upper right corner of the LCD	LCD display interface
Total battery voltage = 25.9V	Remaining battery capacity =11%	
Battery charging current = 0A	Battery discharge current =1A	
Rated battery capacity =100AH	Battery charge cycles =12	
Minimum MOS temperature of battery =29.4℃	Maximum MOS temperature of battery =44.5℃	
The maximum voltage of a single battery cell =3.24V	Minimum voltage of a single battery cell =3.24V	
Maximum temperature of battery cell =32.8℃	Minimum temperature of battery cell =31.5℃	

## Battery Alarm Code

Alarm code	Alarm event	Icon flashing
21	Battery Cell Over Voltage	
22	Battery Cell Under Voltage	
23	Battery Pack Over Voltage	
24	Battery Pack Under Voltage	
25	Charging Over Current	
26	Discharging Over Current	
27	Charging Cell Over Temperature	
28	Discharging Cell Over Temperature	
29	Charging Cell Under Temperature	
30	Discharging Cell Under Temperature	
34	Battery capacity is too low	
44	Battery Cell Voltage Imbalance	
45	Battery Cell Temperature Imbalance	
46	Internal Communication Alarm	

## Battery fault code


Fault code	Fault event	The icon is long and bright
21	Battery Cell Over Voltage	
22	Battery Cell Under Voltage	
23	Battery Pack Over Voltage	

24	Battery Pack Under Voltage	
25	Charging Over Current	
26	Discharging Over Current	
27	Charging Cell Over Temperature	
28	Discharging Cell Over Temperature	
29	Charging Cell Under Temperature	
30	Discharging Cell Under Temperature	
31	Ambient Over Temperature	
32	Ambient Under Temperature	
33	MOS Over Temperature	
35	Battery Short Circuit	
36	Charge Overvoltage	
37	System Failure	
39	Charging MOS Fault	
40	Discharge MOS Fault	
41	Temperature Sensor Fault	
42	Battery Cell Fault	
43	Sampling Communication Failure	
61	Communication Failure	

## 5 OPERATION

### 5.1 Power ON/OFF


#### Side view of unit

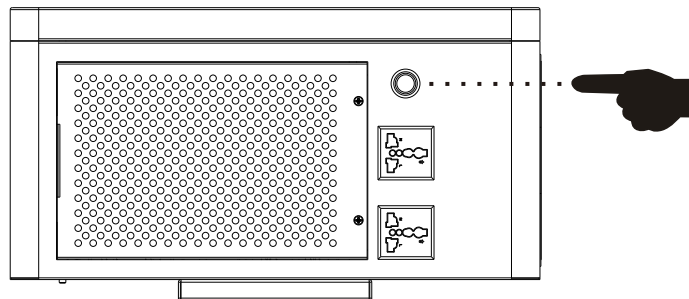

Once the unit has been properly installed and the batteries are connected well, simply press On/Off switch (located on the button of the case) to turn on the unit.

### 5.2 Operation and Display Panel

The operation and display panel, shown in below chart, is on the front panel of the inverter. It includes three indicators, four function keys and a LCD display, indicating the operating status and input/output power information.

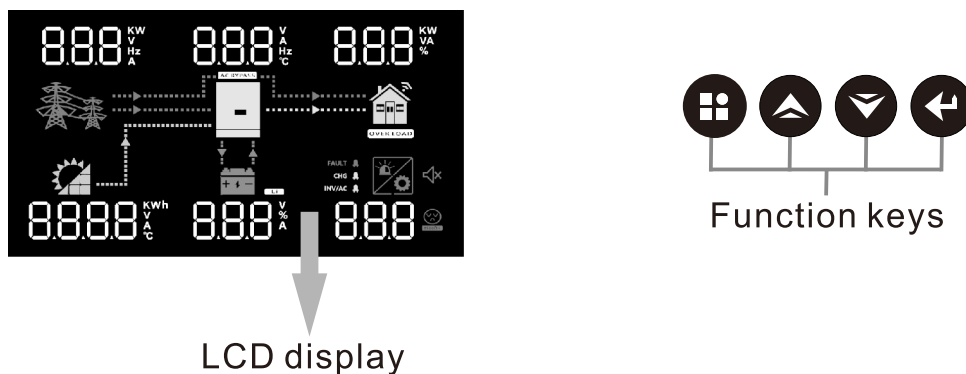


#### LED Indicator

LED Indicator			Messages
<b>INV/AC</b>	Green	Solid On	Output is powered by utility in Line mode.
		Flashing	Output is powered by battery or PV in battery mode.
<b>CHG</b>	Green	Solid On	Battery is fully charged.
		Flashing	Battery is charging.
<b>FAULT</b>	Red	Solid On	Fault occurs in the inverter.
		Flashing	Warning condition occurs in the inverter.





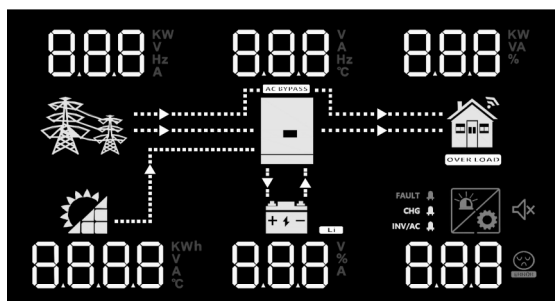

#### Function Keys

Function Key	Description
ESC	To exit setting mode
UP	To go to previous selection
DOWN	To go to next selection
ENTER	To confirm the selection in setting mode or enter setting mode

### 5.3 LCD Display Icons



Icon	Function description
<b>Input Source Information</b>	
	Indicates the AC input.
	Indicates the PV input
	Indicate input voltage, input frequency, PV voltage, charger current (if PV in charging for 4.2KW models), charger power, battery voltage.
<b>Configuration Program and Fault Information</b>	
	Indicates the setting programs.
	Indicates the warning and fault codes.  Warning: 8.8.8  flashing with warning code.  Fault: 8.8.8  lighting with fault code
<b>Output Information</b>	
	Indicate output voltage, output frequency, load percent, load in VA, load in Watt and discharging current.
<b>Battery Information</b>	
<b>Load Information</b>	
	Indicates overload.

Mode Operation Information	
	Indicates unit connects to the mains.
	Indicates unit connects to the PV panel.
	Indicates load is supplied by utility power.
	Indicates the utility charger circuit is working.
	Indicates the DC/AC inverter circuit is working.
Mute Operation	
	Indicates unit alarm is disabled.

## 5.4 LCD Setting

After pressing and holding ENTER button for 3 seconds, the unit will enter setting mode. Press "UP" or "DOWN" button to select setting programs. And then, press "ENTER" button to confirm the selection or ESC button to exit.

### Setting Programs:

Program	Description	Selectable option	
00	Exit setting mode	Escape (default) 00 60H	
		00 60E	One-button restore setting options
01	Output source priority: To configure load power source priority	Utility first 01 USb	Utility will provide power to the loads as first priority. Solar and battery energy will provide power to the loads only when utility power is not available.
		Solar first (default) 01 SUB	Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, utility will supply power to the loads at the same time. Battery provides power to the loads only when any one condition happens: - Solar energy and utility is not available. - Solar energy is not sufficient and utility is not available.
		SBU priority 01 Sbu	Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, battery energy will supply power to the loads at the same time. Utility provides power to the loads only when battery voltage drops to either low-level warning voltage or the setting point in program 12.
		MKS priority 01 nTS	Solar energy provides power to the loads as first priority , if solar energy is not sufficient to power all connected loads , utility energy will supply power to the loads at the same time. The battery only supplies energy to the load as a backup power.



02	Maximum charging current: To configure total charging current for solar and utility chargers. (Max. charging current = utility charging current + solar charging current)	10A 02 10 <sup>A</sup>	20A 02 20 <sup>A</sup>	30A 02 30 <sup>A</sup>
		40A 02 40 <sup>A</sup>	50A 02 50 <sup>A</sup>	60A (default) 02 60 <sup>A</sup>
		70A 02 70 <sup>A</sup>	80A 02 80 <sup>A</sup>	90A 02 90 <sup>A</sup>
		100A 02 100 <sup>A</sup>	110A 02 110 <sup>A</sup>	120A 02 120 <sup>A</sup>
03	AC input voltage range	Appliances (default) 03 APL	If selected, acceptable AC input voltage range will be within 90-280VAC.	
		UPS 03 UPS	If selected, acceptable AC input voltage range will be within 170-280VAC.	
05	Battery type	AGM (default) 05 AGM	Flooded 05 FLD	
		User-Defined 05 USE	LIB 05 LIB	When using lithium battery and not connected to BMS communication
		LIB-485 LIB 05 485	If "User-Defined" is selected, battery charge voltage and low DC cut-off voltage can be set up in program 26, 27 and 29.	
06	Auto restart when overload occurs	Restart disable (default) 06 LTD	Restart enable 06 LFE	
07	Auto restart when over temperature occurs	Restart disable (default) 07 LTD	Restart enable 07 LFE	
09	Output frequency	50Hz (default) 09 50 <sup>Hz</sup>	60Hz 09 60 <sup>Hz</sup>	
10	Output voltage	220V 10 220 <sup>V</sup>	230V (default) 10 230 <sup>V</sup>	
		240V 10 240 <sup>V</sup>		
11	Maximum utility charging current  Note: If setting value in program 02 is smaller than that in program in 11, the inverter will apply charging	2A 11 2A	10A 11 10A	
		20A 11 20A	30A (default) 11 30A	











		40A 11 40A	50A 11 50A	
	current from program 02 for utility charger.	60A 11 60A	70A 11 70A	80A 11 80A
		90A 11 90A	100A 11 100A	
12	Setting voltage point back to utility source when selecting "SBU priority" or "Solar first" or "MKS priority" in program 01.	Available options in 4.2KW model:		
		21.0V 12 <sup>BATT</sup> 21.0 <sub>v</sub>	21.5V 12 <sup>BATT</sup> 21.5 <sub>v</sub>	22.0V 12 <sup>BATT</sup> 22.0 <sub>v</sub>
		22.5V 12 <sup>BATT</sup> 22.5 <sub>v</sub>	23.0V (default) 12 <sup>BATT</sup> 23.0 <sub>v</sub>	23.5V 12 <sup>BATT</sup> 23.5 <sub>v</sub>
		24.0V 12 <sup>BATT</sup> 24.0 <sub>v</sub>	24.5V 12 <sup>BATT</sup> 24.5 <sub>v</sub>	25.0V 12 <sup>BATT</sup> 25.0 <sub>v</sub>
		25.5V 12 <sup>BATT</sup> 25.5 <sub>v</sub>		
		Available options in 6.2KW model:		
		42V 12 <sup>BATT</sup> 42 <sub>v</sub>	43V 12 <sup>BATT</sup> 43 <sub>v</sub>	44V 12 <sup>BATT</sup> 44 <sub>v</sub>
		45V 12 <sup>BATT</sup> 45 <sub>v</sub>	46V (default) 12 <sup>BATT</sup> 46 <sub>v</sub>	47V 12 <sup>BATT</sup> 47 <sub>v</sub>
		48V 12 <sup>BATT</sup> 48 <sub>v</sub>	49V 12 <sup>BATT</sup> 49 <sub>v</sub>	
		50V 12 <sup>BATT</sup> 50 <sub>v</sub>	51V 12 <sup>BATT</sup> 51 <sub>v</sub>	
















	When "SBU" is selected in program 01 and "LIB-485" is selected in program 05, the power point is set back to the common power supply.	Available options in 4.2KW/6.2KW model:		
		10% 12 10 —	15% 12 15 —	When the power is lower than the set value, it will auto matically switch back to the public power output (if the public power access has a delay, it will be switched to the public power after the delay time after the power is lower than the set value.)
		20% 12 20 —	25% 12 25 —	
		30% 12 30 —	35% 12 35 —	
		40% 12 40 —	45% 12 45 —	
		50%(default) 12 50 —		

13	Setting voltage point back to battery mode when selecting "SBU priority" or "Solar first" or "MKS priority" in program 01.	Available options in 4.2KW model:	
		Battery fully charged	24V
		13 <sup>BATT</sup> FUL	13 <sup>BATT</sup> 24.0 <sub>v</sub>
		24.5V	25V
		13 <sup>BATT</sup> 24.5 <sub>v</sub>	13 <sup>BATT</sup> 25.0 <sub>v</sub>
		25.5V	26V
		13 <sup>BATT</sup> 25.5 <sub>v</sub>	13 <sup>BATT</sup> 26.0 <sub>v</sub>
		26.5V	27V (default)
		13 <sup>BATT</sup> 26.5 <sub>v</sub>	13 <sup>BATT</sup> 27.0 <sub>v</sub>
		27.5V	28V
		13 <sup>BATT</sup> 27.5 <sub>v</sub>	13 <sup>BATT</sup> 28.0 <sub>v</sub>
		28.5V	29V
		13 <sup>BATT</sup> 28.5 <sub>v</sub>	13 <sup>BATT</sup> 29.0 <sub>v</sub>
		Available options in 6.2KW model:	
		Battery fully charged	48V
		13 <sup>BATT</sup> FUL	13 <sup>BATT</sup> 48.0 <sub>v</sub>
		49V	50V
		13 <sup>BATT</sup> 49.0 <sub>v</sub>	13 <sup>BATT</sup> 50.0 <sub>v</sub>
		51V	52V
		13 <sup>BATT</sup> 51.0 <sub>v</sub>	13 <sup>BATT</sup> 52.0 <sub>v</sub>
		53V	54V (default)
		13 <sup>BATT</sup> 53.0 <sub>v</sub>	13 <sup>BATT</sup> 54.0 <sub>v</sub>

<p>When "SBU" is selected in program 01 and "LIB-485" is selected in program 05, the power point is set back to battery mode.</p>	<p>55V</p> <p>13 <sup>BATT</sup> <u>55.0</u> v</p>		<p>56V</p> <p>13 <sup>BATT</sup> <u>56.0</u> v</p>	
	<p>57V</p> <p>13 <sup>BATT</sup> <u>57.0</u> v</p>		<p>58V</p> <p>13 <sup>BATT</sup> <u>58.0</u> v</p>	
	<p>Available options in 4.2KW/6.2KW model:</p>			
	<p>30%</p> <p>13 <u>30</u></p>		<p>35%</p> <p>13 <u>35</u></p>	
	<p>40%</p> <p>13 <u>40</u></p>		<p>45%</p> <p>13 <u>45</u></p>	
	<p>50%</p> <p>13 <u>50</u></p>		<p>55%</p> <p>13 <u>55</u></p>	
	<p>60%</p> <p>13 <u>60</u></p>		<p>65%</p> <p>13 <u>65</u></p>	
	<p>70%</p> <p>13 <u>70</u></p>		<p>75%</p> <p>13 <u>75</u></p>	
	<p>80%</p> <p>13 <u>80</u></p>		<p>85%</p> <p>13 <u>85</u></p>	
	<p>90%</p> <p>13 <u>90</u></p>		<p>95%(default)</p> <p>13 <u>95</u></p>	
<p>100%</p> <p>13 <u>100</u></p>				
<p>When the battery power is higher than the set value, it will automatically switch back to the battery mode output (when the set value is 100, it will automatically switch when the battery power is 100%.)</p>				

16	Charger source priority: To configure charger source priority	If this inverter/charger is working in Line, Standby or Fault mode, charger source can be programmed as below:	
		Solar first 16 CS0	Solar energy will charge battery as first priority. Utility will charge battery only when solar energy is not available.
		Solar and Utility (default) 16 SNU	Solar energy and utility will charge battery at the same time.
		Only Solar 16 OSO	Solar energy will be the only charger source no matter utility is available or not.
		If this inverter/charger is working in Battery mode or Power saving mode, only solar energy can charge battery. Solar energy will charge battery if it's available and sufficient.	
18	Alarm control	Alarm on (default) 18 bon	Alarm off 18 bof
19	Auto return to default display screen	Return to default display screen (default) 19 ESP	If selected, no matter how users switch display screen, it will automatically return to default display screen (Input voltage /output voltage) after no button is pressed for 1 minute.
		Stay at latest screen 19 LEP	If selected, the display screen will stay at latest screen user finally switches.
20	Backlight control	Backlight on (default) 20 LON	Backlight off 20 LOF
22	Beeps while primary source is interrupted	Alarm on (default) 22 AON	Alarm off 22 AOF
23	Overload bypass: When enabled, the unit will transfer to line mode if overload occurs in battery mode.	Bypass disable (default) 23 byd	Bypass enable 23 byE
25	Record Fault code	Record enable (default) 25 FEN	Record disable 25 FdS

26	Bulk charging voltage (C.V voltage)	4.2KW default setting: 28.2V 	
		6.2KW default setting: 56.4V 	
		If self-defined is selected in program 5, this program can be set up. Setting range is from 25.0V to 30.0V for 4.2KW model and 48.0V to 60.0V for 6.2KW model. Increment of each click is 0.1V.	
27	Floating charging voltage	4.2KW default setting: 27.0V 	
		6.2KW default setting: 54.0V 	
		If self-defined is selected in program 5, this program can be set up. Setting range is from 25.0V to 30.0V for 4.2KW model and 48.0V to 60.0V for 6.2KW model. Increment of each click is 0.1V.	
29	Low DC cut-off voltage	4.2KW default setting: 20.0V 	
		6.2KW default setting: 40.0V 	
		If self-defined is selected in program 5, this program can be set up. Setting range is from 20.0V to 25.0V for 4.2KW model and 40.0V to 50.0V for 6.2KW model. Increment of each click is 0.1V. Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected.	
		If "LIB-485" is selected in item 05, you can set the battery low SOC shutdown point.	 The default value is 20%, and 5% ~ 30% can be set.
30	Battery equalization	Battery equalization 	Battery equalization disable (default) 
		If "Flooded" or "User-Defined" is selected in program 05, this program can be set up.	
31	Battery equalization voltage	4.2KW default setting: 29.2V 	

		6.2KW default setting: 58.4V 	
		Setting range is from 25.0V to 31.5V for 4.2KW model and 48.0V to 61.0V for 6.2KW model. Increment of each click is 0.1V.	
33	Battery equalized time	60min (default) 	Setting range is from 5min to 900min. Increment of each click is 5min.
34	Battery equalized timeout	120min (default) 	Setting range is from 5min to 900 min. Increment of each click is 5 min.
35	Equalization interval	30days (default) 	Setting range is from 0 to 90 days. Increment of each click is 1 day
36	Equalization activated immediately	Enable 	Disable (default) 
		If equalization function is enabled in program 30, this program can be set up. If "Enable" is selected in this program, it's to activate battery equalization immediately and LCD main page will shows "E9". If "Disable" is selected, it will cancel equalization function until next activated equalization time arrives based on program 35 setting. At this time, "E9" will not be shown in LCD main page.	
37	GRID-tie operation	Off grid (default) 	Inverter operates only in off-grid mode. Solar energy provides power to the loads as first priority and charging second
		Hybrid 	Inverter operates hybrid mode. Solar energy provides power to the loads as first priority and charging second Excess energy feed to grid.
38	GRID-tie current	10A 	Increment of each click is 2A.
39	Led pattern light	Led pattern off 	Led pattern on (default) 
41	Dual output	disable (default) 	use 
42	Enter the dual output functional voltage point	4.2KW default setting: 22.0V 	
		6.2KW default setting: 44.0V 	
		Setting range is from 20.0V to 26.0V for 24VDC model and 40.0V to 52.0V for 48VDC model. Increment of each click is 0.1V.	



	Enter the power point of dual output function	Available options in 4.2KW/6.2KW model:		When the power is lower than the set value or battery low voltage alarm, the main output of the inverter is disconnected, and the main output no longer supplies power to the external.
		5% 42 <u>5</u>	10% 42 <u>10</u>	
		15% 42 <u>15</u>	20% 42 <u>20</u>	
		25% 42 <u>25</u>	30% 42 <u>30</u>	
		35% 42 <u>35</u>	40% 42 <u>40</u>	
		45% 42 <u>45</u>	50%(default) 42 <u>50</u>	
		55%(default) 42 <u>55</u>	60% 42 <u>60</u>	
		65% 42 <u>65</u>	70% 42 <u>70</u>	
		75% 42 <u>75</u>	80% 42 <u>80</u>	
		85% 42 <u>85</u>		
43	Lithium battery protocol	PYLON (default) 43 <u>PYL</u>	PACE 43 <u>PAC</u>	
44	Delayed grid access	disable 44 <u>DIS</u>	enable(default) 44 <u>ENR</u>	
45	Maximum Second Load	20%~70%	If the inverter enter the dual output function, the output power of the second channel, can be change to 20%~70% of the rated power.	



## 5.5 Display Setting

The LCD display information will be switched in turns by pressing "UP" or "DOWN" key. The selectable information is switched as below order: input voltage, input frequency, PV voltage, charging current, charging power, battery voltage, output voltage, output frequency, load percentage, load in Watt, load in VA, load in Watt, DC discharging current, main CPU Version.

Selectable information	LCD display
<b>Charged state, and the power is less than 1kw</b>	
Input voltage=222V , PV voltage=168V, Battery voltage=25V, Output voltage=222V, Load in Watt=188W, Chg(Flashing), Inv/ac(bright)	
Input voltage=223V , PV current=2.3A, Battery current=20A, Output voltage=224V, Load in VA=188VA, Chg(Flashing), Inv/ac(bright)	
Input frequency=50.0Hz , PV power=0.434KWh, Battery current=20A, Output frequency=50.0Hz, Load in watt=188W, Chg(Flashing), Inv/ac(bright)	
Input voltage=223V , Pv ntc temperture=71.0°C, Battery voltage= 25V, Inv ntc temperture=35.0°C, Load percentage=12% , Chg(Flashing), Inv/ac(bright)	
Main CPU version checking	Main CPU version 24 00 

## 5.6 Operating Mode Description

Operation mode	Selectable information	LCD display
<b>Stand by mode</b> *standby mode: The inverter is not turned on yet but at this time, the inverter can charge battery without AC output.	No output is supplied by the unit but it still can charge batteries.	<p>PV and mains charging</p>
		<p>Mains charging</p>
		<p>PV charging</p>
Line Mode	The unit will provide output power from the mains. It will also charge the battery at line mode.	<p>Grid-connected mode</p>
		<p>Mains charging</p>
Grid-Tie operation	When working in Grid-Tie mode, the will be flash 3S/times.	<p>Grid-connected mode</p>

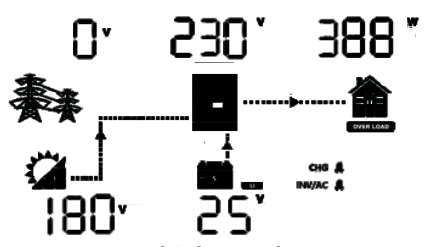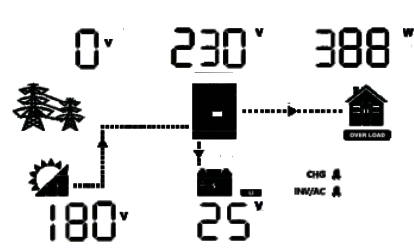Operation mode	Selectable information	LCD display
Battery Mode	The unit will provide output power from battery and power.	 <p>Battery and Solar supply power to loads at the same time</p>
		 <p>Solar supply power to loads</p>

## RGB Light (option )

① **Battery Mode:red Light**

② **Utility Mode:blue Light**

③ **PV Mode:purple Light**

### 5.7 Battery Equalization Description

Equalization function is added into charge controller. It reverses the buildup of negative chemical effects like stratification, a condition where acid concentration is greater at the bottom of the battery than at the top. Equalization also helps to remove sulfate crystals that might have built up on the plates. If left unchecked, this condition, called sulfation, will reduce the overall capacity of the battery. Therefore, it's recommended to equalize battery periodically.


#### ⌘ **How to Apply Equalization Function**

You must enable battery equalization function in monitoring LCD setting program 30 first. Then, you may apply this function in device by either one of following methods:

1. Setting equalization interval in program 35.
2. Active equalization immediately in program 36.


#### ⌘ **When to Equalize**

In float stage, when the setting equalization interval (battery equalization cycle) is arrived, or equalization is active immediately, the controller will start to enter Equalize stage.

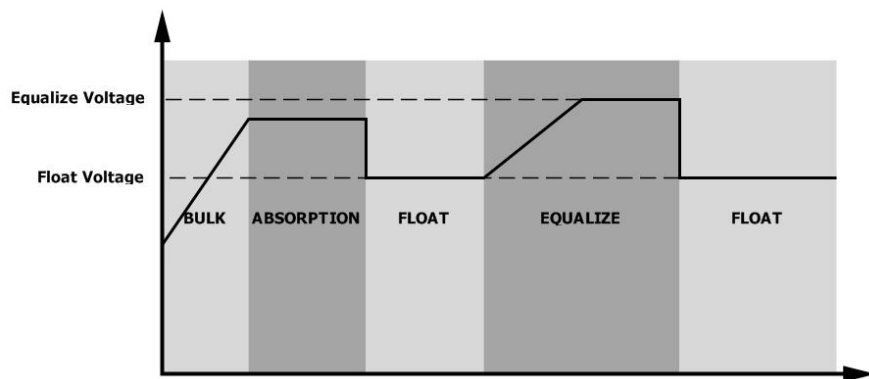


### ⌘ Equalize charging time and timeout

In Equalize stage, the controller will supply power to charge battery as much as possible until battery voltage raises to battery equalization voltage. Then, constant-voltage regulation is applied to maintain battery voltage at the battery equalization voltage. The battery will remain in the Equalize stage until setting battery equalized time is arrived.

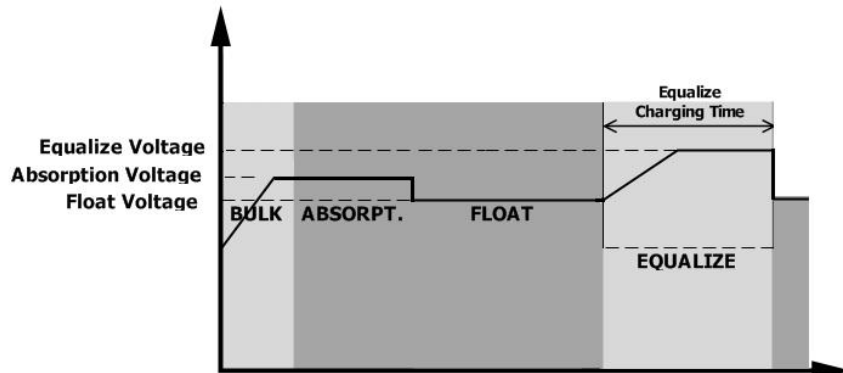

However, in Equalize stage, when battery equalized time is expired and battery voltage doesn't rise to battery equalization voltage point, the charge controller will extend the battery equalized time until battery voltage achieves battery equalization voltage. If battery voltage is still lower than battery equalization voltage when battery equalized timeout setting is over, the charge controller will stop equalization and return to float stage.

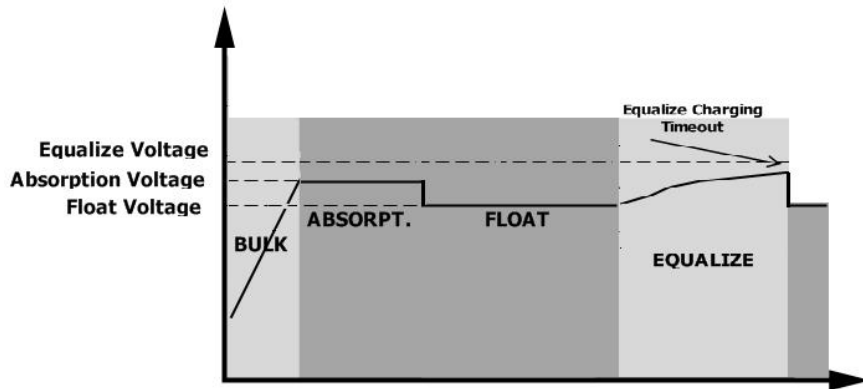

## 5.8 Mains and lithium battery activation function

1. After 90s of mains power connection to the inverter, the machine is connected to the mains and starts to work.
2. The inverter is in lithium battery mode (item 05 is LIb or LIb-485). After the mains is connected, the battery is not connected, and the mains activation function is automatically enabled.

## 5.9 Fault Reference Code

Fault Code	Fault Event	Icon on
01	Fan is locked when inverter is off.	01 <small>ERROR</small>
02	Over temperature	02 <small>ERROR</small>
03	Battery voltage is too high	03 <small>ERROR</small>
04	Battery voltage is too low	04 <small>ERROR</small>
05	Output short circuited or over temperature is detected by internal converter components.	05 <small>ERROR</small>
06	Output voltage is too high.	06 <small>ERROR</small>
07	Overload time out	07 <small>ERROR</small>
08	Bus voltage is too high	08 <small>ERROR</small>
09	Bus soft start failed	09 <small>ERROR</small>
51	Over current or surge	51 <small>ERROR</small>
52	Bus voltage is too low	52 <small>ERROR</small>
53	Inverter soft start failed	53 <small>ERROR</small>
55	Over DC voltage in AC output	55 <small>ERROR</small>
57	Current sensor failed	57 <small>ERROR</small>
58	Output voltage is too low	58 <small>ERROR</small>
59	PV voltage is over limitation	59 <small>ERROR</small>

## 5.10 Warning Indicator

Warning Code	Warning Event	Audible Alarm	Icon flashing
01	Fan is locked when inverter is on.	Beep three times every second	01 ☹️
03	Battery is over-charged	Beep once every second	03 ☹️
04	Low battery	Beep once every second	04 ☹️
07	Overload	Beep once every 0.5 second	07 ☹️
10	Output power derating	Beep twice every 3 seconds	10 ☹️
15	PV energy is low.	Beep twice every 3 seconds	15 ☹️
E9	Battery equalization	None	E9 ☹️
bP	Battery is not connected	None	bP ☹️


## 6 CLEARANCE AND MAINTENANCE FOR ANTI-DUST KIT

### 6.1 Overview


Every inverter is already installed with anti-dust kit from factory. Inverter will automatically detect this kit and activate internal thermal sensor to adjust internal temperature. This kit also keeps dust from your inverter and increases product reliability in harsh environment.

### 6.2 Clearance and Maintenance

**Step 1:** Please loosen the screw in counterclockwise direction on the top of the inverter.

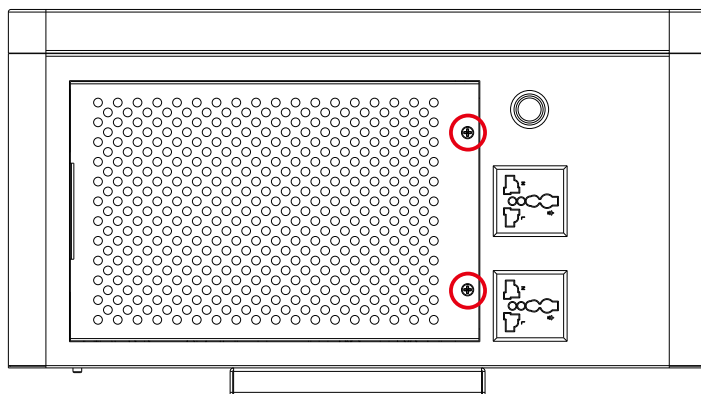

**Step 2:** Then, dustproof case can be removed and take out air filter foam as shown in below chart.

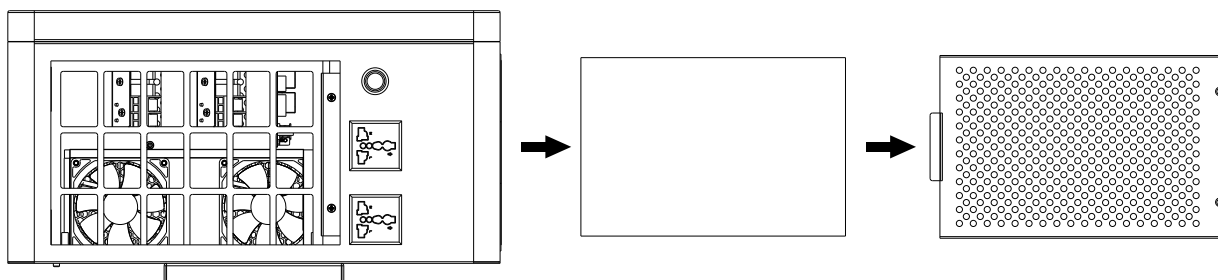

**Step 3:** Clean air filter foam and dustproof case. After clearance, re-assemble the dust-kit back to the inverter.

**NOTICE:** The anti-dust kit should be cleaned from dust every one month.



## 7 SPECIFICATIONS

Table 1 Line Mode Specifications

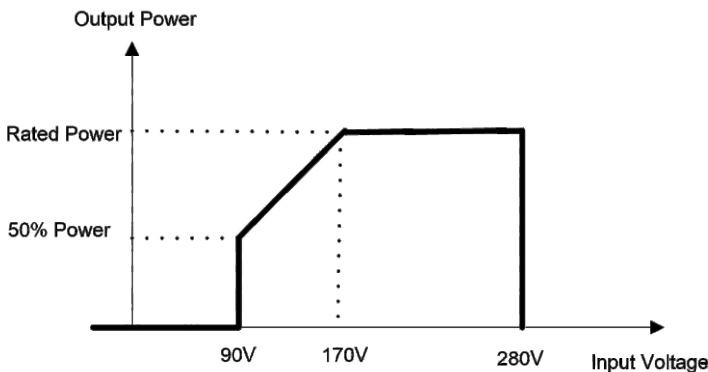
INVERTER MODEL	4.2KW	6.2KW
Input Voltage Waveform	Sinusoidal (utility or generator)	
Nominal Input Voltage	230Vac	
Low Loss Voltage	170Vac±7V (UPS); 90Vac±7V (Appliances)	
Low Loss Return Voltage	180Vac±7V (UPS); 100Vac±7V (Appliances)	
High Loss Voltage	280Vac±7V	
High Loss Return Voltage	270Vac±7V	
Max AC Input Voltage	300Vac	
Nominal Input Frequency	50Hz / 60Hz (Auto detection)	
Low Loss Frequency	40±1Hz	
Low Loss Return Frequency	42±1Hz	
High Loss Frequency	65±1Hz	
High Loss Return Frequency	63±1Hz	
Output Short Circuit Protection	Circuit Breaker	
Efficiency (Line Mode)	>95% ( Rated R load, battery full charged )	
Transfer Time	10ms typical (UPS); 20ms typical (Appliances)	
<b>Output power derating:</b> When AC input voltage drops to 170V, the output power will be derated.	 <p>The graph illustrates the output power derating behavior of the inverter. The y-axis is labeled 'Output Power' and the x-axis is labeled 'Input Voltage'. The graph shows a horizontal line at 'Rated Power' from 170V to 280V, a horizontal line at '50% Power' from 90V to 170V, and a diagonal line connecting (90V, 50% Power) to (170V, Rated Power). The power is zero for input voltages below 90V and above 280V.</p>	


Table 2 Inverter Mode Specifications

<b>INVERTER MODEL</b>	<b>4.2KW</b>	<b>6.2KW</b>
<b>Rated Output Power</b>	4.2KW	6.2KW
<b>Output Voltage Waveform</b>	Pure Sine Wave	
<b>Output Voltage Regulation</b>	230Vac±5%	
<b>Output Frequency</b>	50Hz	
<b>Peak Efficiency</b>	93%	
<b>Overload Protection</b>	3s@≥150% load; 5s@101%~150% load	
<b>Surge Capacity</b>	2* rated power for 5 seconds	
<b>Nominal DC Input Voltage</b>	24Vdc	48Vdc
<b>Cold Start Voltage</b>	23.0Vdc	46.0Vdc
<b>Low DC Warning Voltage</b>		
@ load < 50%	22.0Vdc	44.0Vdc
@ load ≥ 50%	21.0Vdc	42.0Vdc
<b>Low DC Warning Return Voltage</b>		
@ load < 50%	22.5Vdc	45.0Vdc
@ load ≥ 50%	22.0Vdc	44.0Vdc
<b>Low DC Cut-off Voltage</b>		
@ load < 50%	20.5Vdc	41.0Vdc
@ load ≥ 50%	20.0Vdc	40.0Vdc
<b>High DC Recovery Voltage</b>	32Vdc	62Vdc
<b>High DC Cut-off Voltage</b>	33Vdc	63Vdc
<b>No Load Power Consumption</b>	30W	50W

Table 3 Two Load Output Power

<b>INVERTER MODEL</b>	<b>4.2KW</b>	<b>6.2KW</b>
<b>Full Load</b>	4200W	6200W
<b>Maximum Main Load</b>	4200W	6200W
<b>Second Load Range</b>	840W~2940W	1240W~4340W
<b>Main Load Cut Off Voltage</b>	22VDC	44VDC
<b>Main Load Return Voltage</b>	26VDC	52VDC

Table 4 Charge Mode Specifications

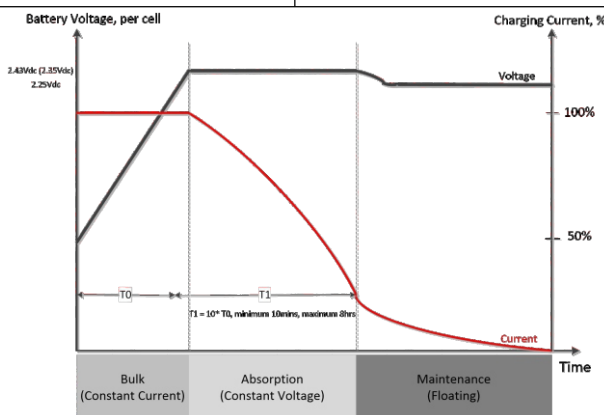Utility Charging Mode			
INVERTER MODEL		4.2KW	6.2KW
Charging Algorithm		3-Step	
AC Charging Current (Max)		100Amp (@V <sub>I/P</sub> =230Vac)	
Bulk Charging	Flooded Battery	29.2	58.4
Voltage	AGM / Gel Battery	28.2	56.4
Floating Charging Voltage		27Vdc	54Vdc
Charging Curve			

MPPT Solar Charging Mode		
INVERTER MODEL	4.2KW	6.2KW
Max. PV Array Power	6200W	6500W
Nominal PV Voltage	240Vdc	360Vdc
PV Array MPPT Voltage Range	60Vdc~500Vdc	
Max. PV Array Open Circuit Voltage	500Vdc	
Max Charging Current (AC charger plus solar charger)	120Amp	120Amp

Table 5 Grid-Tie Operation

INVERTER MODEL	4.2KW	6.2KW
Nominal Output Voltage	220/230/240 VAC	
Feed-in Grid Voltage Range	195 ~ 253VAC	
Feed-in Grid Frequency Range	50 ± 1Hz / 60 ± 1Hz	
Nominal Output Current	18.2A	26.9A
Power Factor Range	> 0.99	
Maximum Conversion Efficiency (DC/AC)	97%	

Table 6 General Specifications

INVERTER MODEL	4.2KW	6.2KW
Safety Certification	CE	
Operating Temperature Range	-10°C to 50°C	
Storage temperature	-15°C ~ 60°C	
Humidity	5% to 95% Relative Humidity (Non-condensing)	
Dimension (D*W*H), mm	205*530*400	
Net Weight, kg	16	16.9

## 8 TROUBLE SHOOTING

Problem	LCD/LED/Buzzer	Explanation / Possible cause	What to do
Unit shuts down automatically during startup process.	LCD/LEDs and buzzer will be active for 3 seconds and then complete off.	The battery voltage is too low (<1.91V/Cell)	1. Re-charge battery. 2. Replace battery.
No response after power on.	No indication.	1. The battery voltage is far too low. (<1.4V/Cell) 2. Internal fuse tripped.	1. Contact repair center for replacing the fuse. 2. Re-charge battery. 3. Replace battery.
Mains exist but the unit works in battery mode.	Input voltage is displayed as 0 on the LCD and green LED is flashing.	Input protector is tripped	Check if AC breaker is tripped and AC wiring is connected well.
	Green LED is flashing.	Insufficient quality of AC power. (Shore or Generator)	1. Check if AC wires are too thin and/or too long. 2. Check if generator (if applied) is working well or if input voltage range setting is correct. (UPS↔Appliance)
	Green LED is flashing.	Set "Solar First" as the priority of output source.	Change output source priority to Utility first.
When the unit is turned on, internal relay is switched on and off repeatedly.	LCD display and LEDs are flashing	Battery is disconnected.	Check if battery wires are connected well.
Buzzer beeps continuously and red LED is on.	Fault code 07	Overload error. The inverter is overload 110% and time is up.	Reduce the connected load by switching off some equipment.
	Fault code 05	Output short circuited.	Check if wiring is connected well and remove abnormal load.
		Temperature of internal converter component is over 120°C.	Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.
	Fault code 02	Internal temperature of inverter component is over 100°C.	Return to repair center.
	Fault code 03	Battery is over-charged.	Return to repair center.
		The battery voltage is too high.	Check if spec and quantity of batteries are meet requirements.
	Fault code 01	Fan fault	Replace the fan.
	Fault code 06/58	Output abnormal (Inverter voltage below than 190Vac or is higher than 260Vac)	1. Reduce the connected load. 2. Return to repair center
	Fault code 08/09/53/57	Internal components failed.	Return to repair center.
	Fault code 51	Over current or surge.	Restart the unit, if the error happens again, please return to repair center.
	Fault code 52	Bus voltage is too low.	
	Fault code 55	Output voltage is unbalanced.	

## 9 Appendix: Approximate Back-up Time Table

Model	Load (W)	Backup Time @ 25.6 Vdc 100Ah (min)	Backup Time @ 25.6Vdc 200Ah (min)	Backup Time @ 25.6 Vdc 300Ah (min)	Backup Time @ 25.6 Vdc 400Ah (min)
4.2KW	300	449	1100	1413	1884
	600	222	525	707	942
	900	124	303	471	628
	1200	95	227	353	471
	1500	68	164	283	377
	1800	56	126	236	314
	2100	48	108	202	269
	2400	35	94	157	236
	2700	31	74	157	209
	3200	28	67	132	177
	3600	25	60	118	157
	4200	22	53	101	135

Model	Load (W)	Backup Time @ 51.2 Vdc 100Ah (min)	Backup Time @ 51.2Vdc 200Ah (min)	Backup Time @ 51.2Vdc 300Ah (min)	Backup Time @ 51.2Vdc 400Ah (min)
6.2KW	500	613	1288	1696	2261
	1000	268	613	848	1130
	1500	158	402	565	754
	2000	111	271	424	565
	2500	90	215	339	452
	3200	76	182	265	353
	3500	65	141	242	323
	4000	50	112	212	283
	4500	44	100	188	251
	5000	40	90	170	226
	6200	36	80	137	182

**Note:** 1. Backup time depends on the quality of the battery, age of battery and type of battery.

Specifications of batteries may vary depending on different manufacturers.

2. The final interpretation right of this product belongs to the company.

## 技术要求:

- 1、尺寸:单页尺寸142\*210mm;
- 2、材质:封面105g铜版纸，内页80g书写纸;
- 3、颜色:黑白印刷;
- 4、印刷效果:图片、字体、线条需清晰，无重影，无毛边，无多余杂点;
- 5、料号打于后封面左下角;

公司名称:广东三瑞电源有限公司

设计: 林美红

日期: 2025.03.24

**\*注:此技术要求不用印刷**