

User Manual

3.0KW/4.0KW INVERTER / CHARGER

Table Of Contents

ABOUT THIS MANUAL	2
Purpose.....	2
Scope	2
SAFETY INSTRUCTIONS.....	2
INTRODUCTION	3
Features	3
Basic System Architecture	3
Product Overview.....	4
INSTALLATION	5
Unpacking and Inspection.....	5
Preparation	5
Mounting the Unit.....	5
Battery Connection	6
AC Input/Output Connection.....	8
PV Connection	9
Final Assembly.....	10
OPERATION	11
Power ON/OFF	11
Operation and Display Panel	11
LCD Display Icons	12
LCD Setting.....	14
Lithium battery connection.....	21
Display Setting	25
Operating Mode Description	27
Fault Reference Code.....	31
Warning Indicator	32
SPECIFICATIONS	33
Table 1 Line Mode Specifications	33
Table 2 Inverter Mode Specifications	34
Table 3 Charge Mode Specifications	35
Table 4 General Specifications	36
TROUBLE SHOOTING.....	37
Appendix: Approximate Back-up Time Table	38

ABOUT THIS MANUAL

Purpose

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations. Keep this manual for future reference.

Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

SAFETY INSTRUCTIONS



WARNING: This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

1. Before using the unit, read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
2. **CAUTION** --To reduce risk of injury, charge only deep-cycle lead acid type rechargeable batteries. Other types of batteries may burst, causing personal injury and damage.
3. Do not disassemble the unit. Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
4. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
5. **CAUTION** – Only qualified personnel can install this device with battery.
6. **NEVER** charge a frozen battery.
7. For optimum operation of this inverter/charger, please follow required spec to select appropriate cable size. It's very important to correctly operate this inverter/charger.
8. Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion.
9. Please strictly follow installation procedure when you want to disconnect AC or DC terminals. Please refer to INSTALLATION section of this manual for the details.
10. **GROUNDING INSTRUCTIONS** -This inverter/charger should be connected to a permanent grounded wiring system. Be sure to comply with local requirements and regulation to install this inverter.
11. **NEVER** cause AC output and DC input short circuited. Do NOT connect to the mains when DC input short circuits.
12. **Warning!!** Only qualified service persons are able to service this device. If errors still persist after following troubleshooting table, please send this inverter/charger back to local dealer or service center for maintenance.

INTRODUCTION

This is a multi-function inverter/charger, combining functions of inverter, MPPT solar charger and battery charger to offer uninterruptible power support with portable size. Its comprehensive large LCD display offers user-configurable and easy-accessible touch button operation such as battery charging current, AC/solar charger priority, and acceptable input voltage based on different applications.

Features

- Off grid solar inverter
- No battery function available
- Under Battery Mode can adjust AC voltage 100VAC,110VAC and 120VAC.
- Utility power,battery and PV power complement each other
- Pure sine wave solar inverter
- Unique glass top cover design with 6.25inch LCD display and touchable buttons
- Built-in 140A MPPT (Max PV 5600W) solar charger
- High PV input range from 55V-350Vdc
- Smart battery charger design for optimized battery performance
- Configurable AC/Battery input priority via LCD setting
- Auto restart while PV is recovering
- Over-load , over temperature and output short circuit protection
- Cold restart function
- Built-in lithium battery automatic activation
- Communication with RS232/RS485
- WiFi monitoring function (optional)
- Anti-dust kit for harsh environment(optional)
- Restore default Settings with one click

Basic System Architecture

The following illustration shows basic application for this inverter/charger. It also includes following devices to have a complete running system:

- Generator or Utility.
- PV modules (option)

Consult with your system integrator for other possible system architectures depending on your requirements.

This inverter can power all kinds of appliances in home or office environment, including motor-type appliances such as tube light, fan, refrigerator and air conditioner.



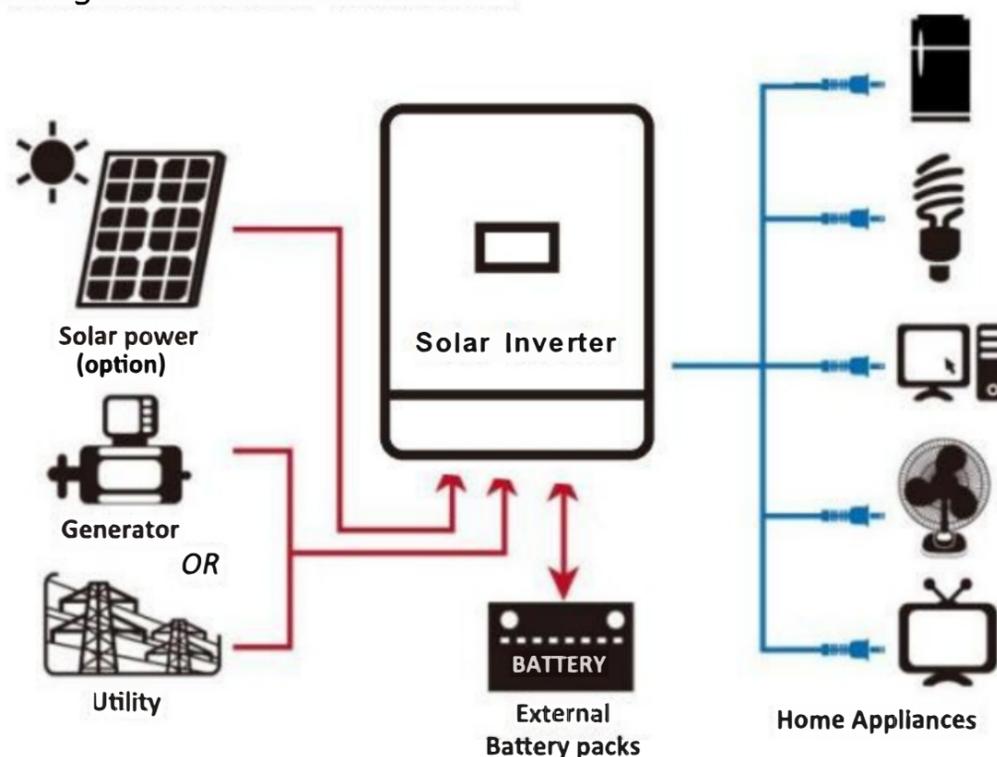


Figure 1 Hybrid Power System

Product Overview

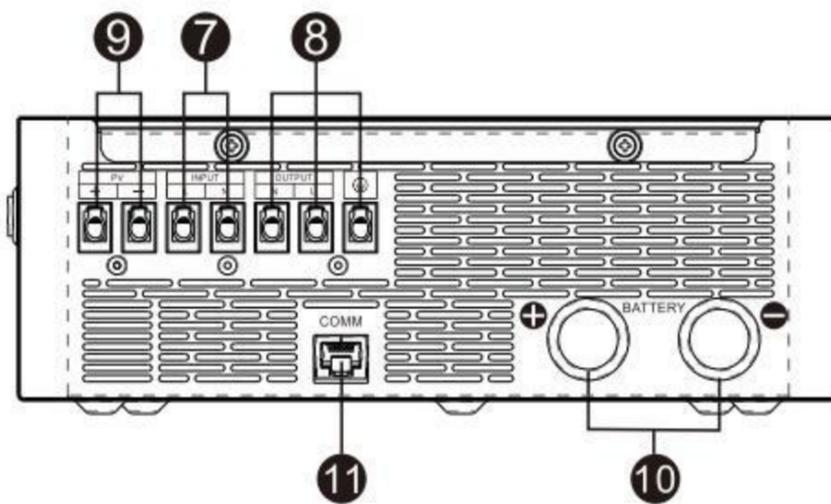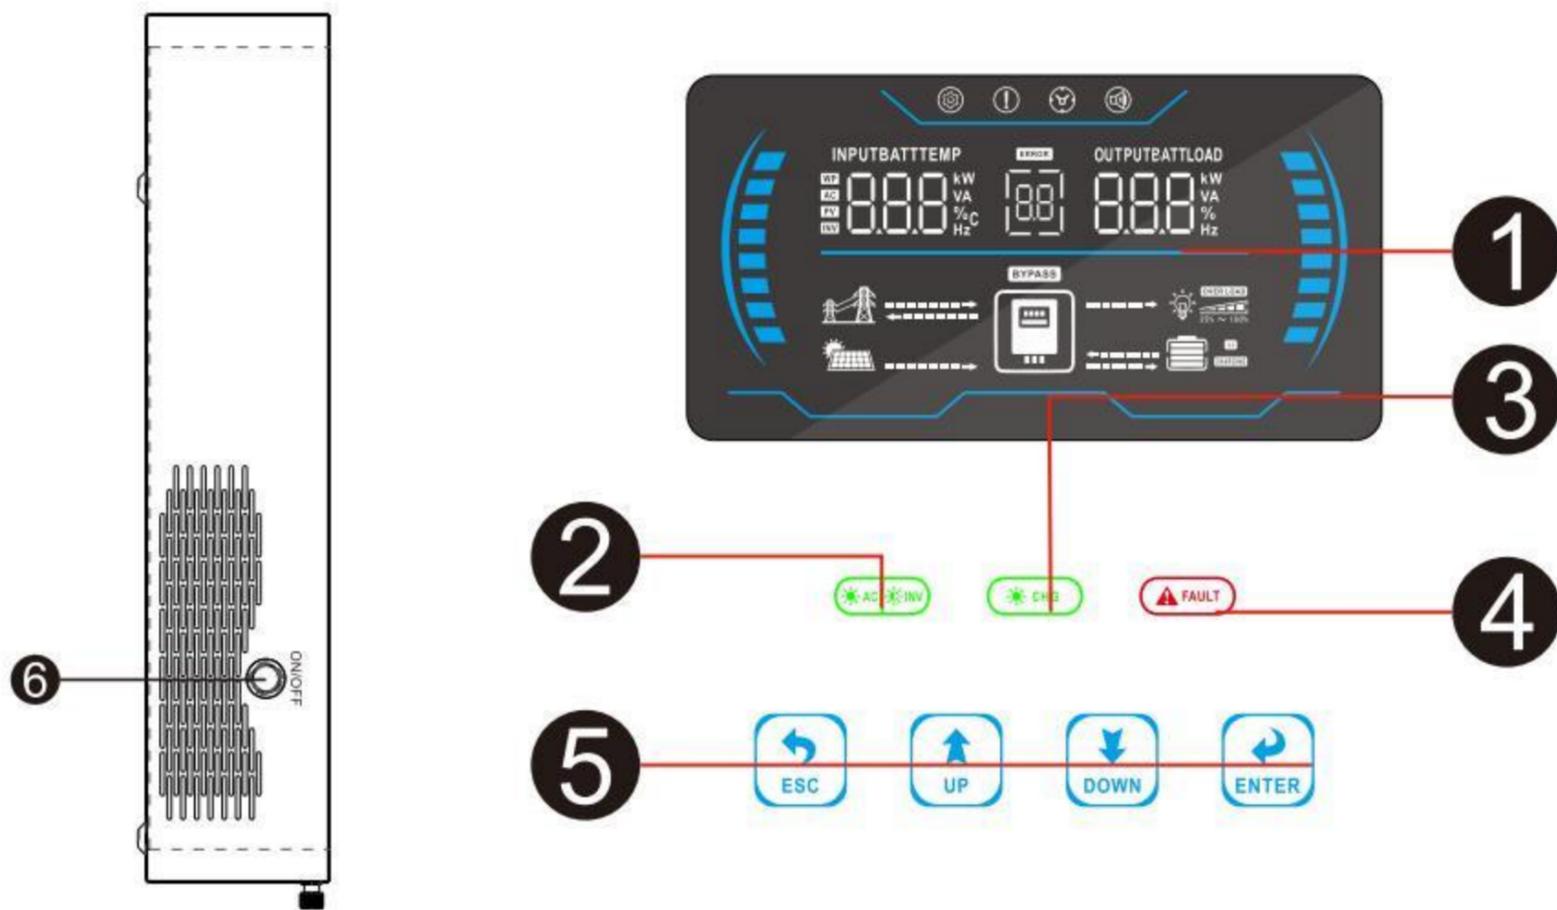

1. LCD display
2. Status indicator
3. Charging indicator
4. Fault indicator
5. Function touch buttons
6. Power on/off switch
7. AC input
8. AC output
9. PV input
10. Battery input
11. RS485/RS232 communication port

INSTALLATION


Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:

- The unit x 1
- User manual x 1

Preparation


Before connecting all wirings, please take off bottom cover by removing two screws as shown below.

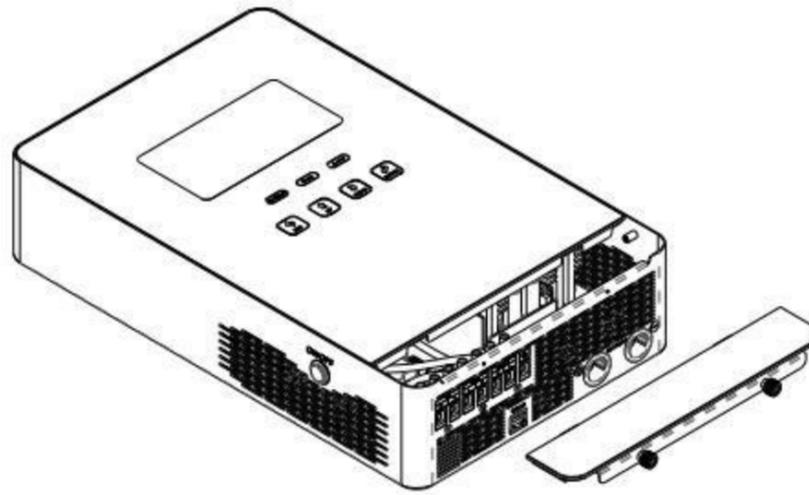

Mounting the Unit


Consider the following points before selecting where to install:

- Do not mount the inverter on flammable construction materials.
- Mount on a solid surface
- Install this inverter at eye level in order to allow the LCD display to be read at all times.
- The ambient temperature should be between 0°C and 55°C to ensure optimal operation.
- The recommended installation position is to be adhered to the wall vertically.
- Be sure to keep other objects and surfaces as shown in the right diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.

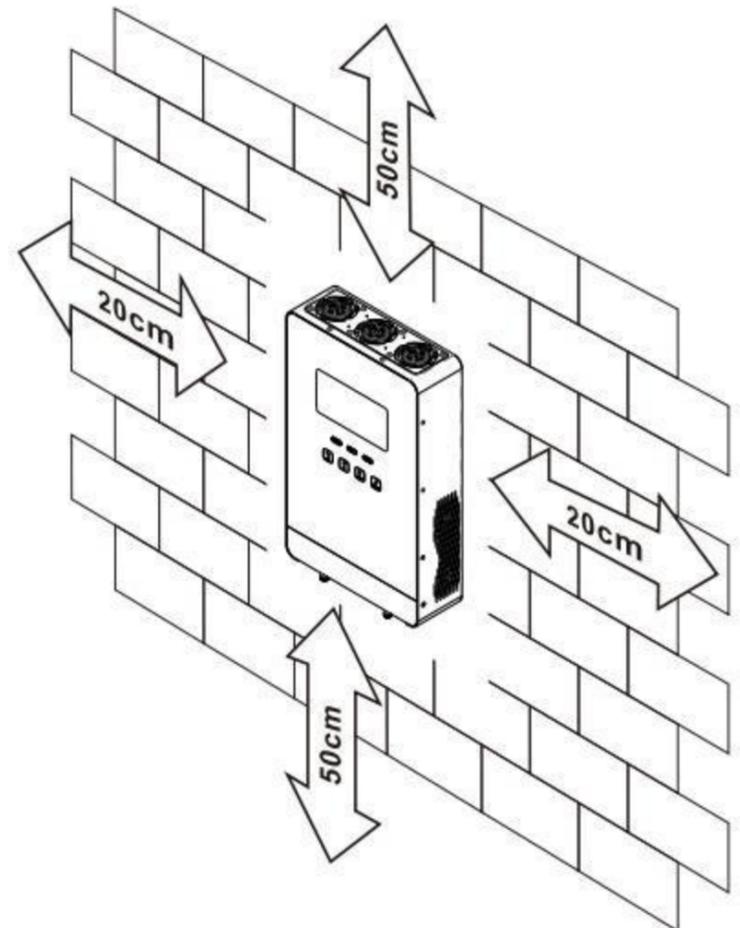

SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY.

Install the unit by screwing two screws.

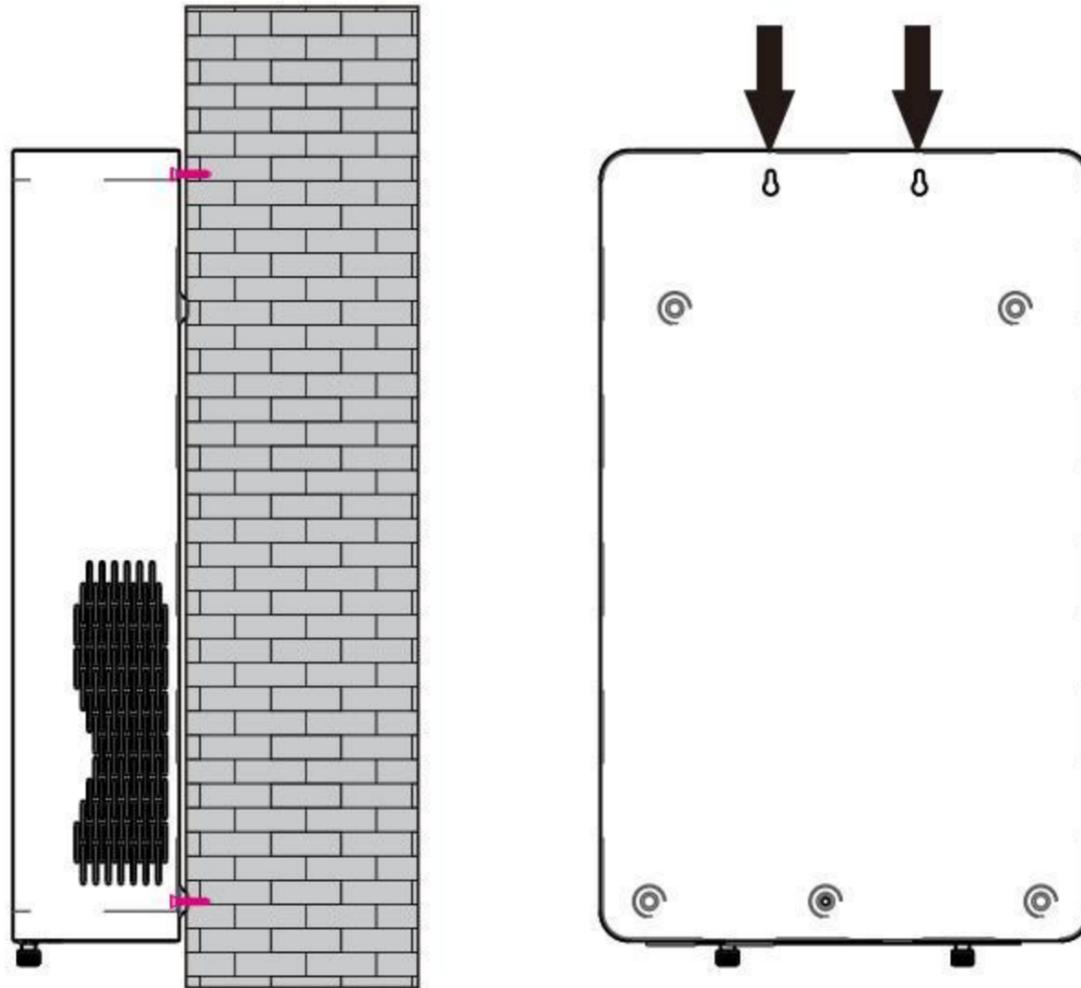


Battery Connection

CAUTION: For safety operation and regulation compliance, it's requested to install a separate DC over-current protector or disconnect device between battery and inverter. It may not be requested to have a disconnect device in some applications, however, it's still requested to have over-current protection installed. Please refer to typical amperage in below table as required fuse or breaker size.

WARNING! All wiring must be performed by a qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for battery connection. To reduce risk of injury, please use the proper recommended cable and terminal size as below.

Ring terminal:

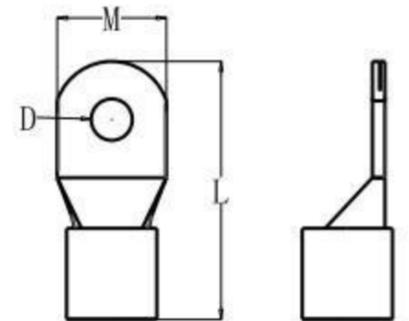

Recommended battery cable and terminal size:


Model	Typical Amperage	Battery Capacity	Wire Size	Ring Terminal			Torque Value	
				Cable mm ²	Dimensions			
					D (mm)	L (mm)		M (mm)
3.0KW 24V	110A	100AH	1*4AWG	22	8	44	18.2	2~ 3 Nm
		200AH			8	44		
4.0KW 24V	150A	200AH	1*2AWG	35	8	44	18.2	2~ 3 Nm
					8	44		

Please follow below steps to implement battery connection:

1. Assemble battery ring terminal based on recommended battery cable and terminal size.
2. Connect all battery packs as units requires.

NOTE: Please only use sealed lead acid battery or sealed GEL/AGM lead-acid battery or lithium battery.

3. Insert the ring terminal of battery cable flatly into battery connector of inverter and make sure the bolts are tightened with torque of 2-3 Nm. Make sure polarity at both the battery and the inverter/charge is correctly connected and ring terminals are tightly screwed to the battery terminals.

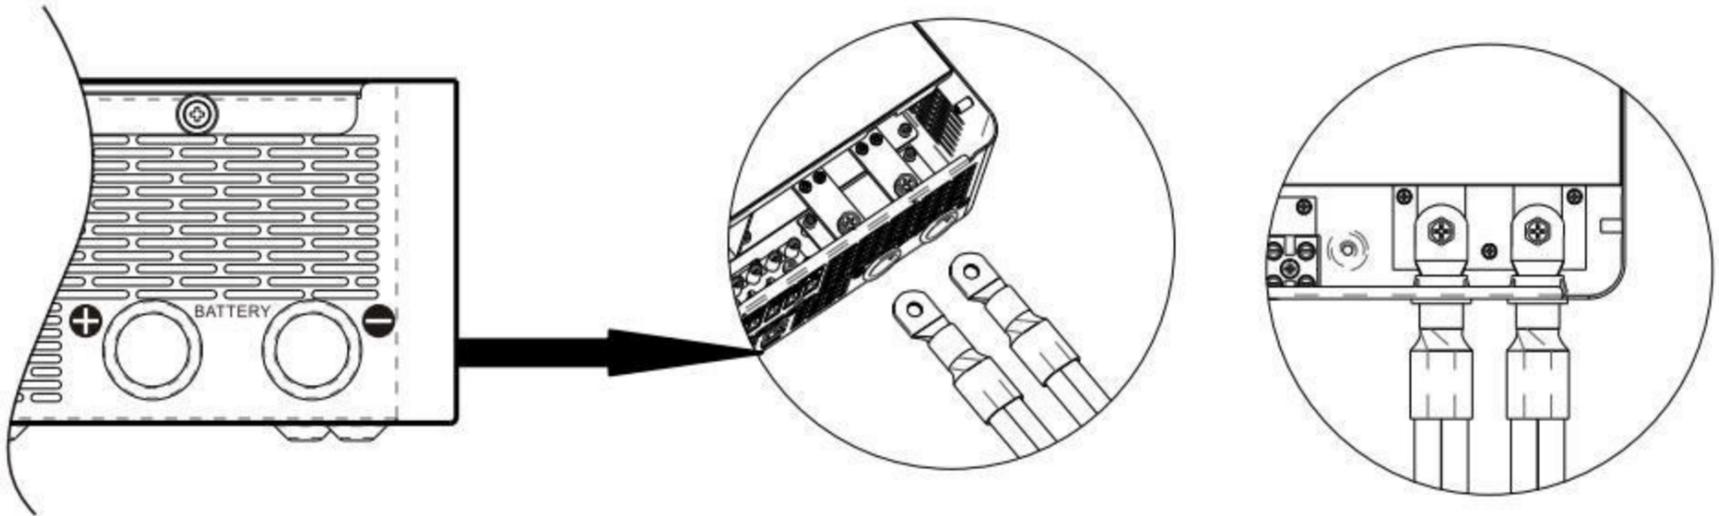

WARNING: Shock Hazard

Installation must be performed with care due to high battery voltage in series.



CAUTION!! Do not place anything between the flat part of the inverter terminal and the ring terminal. Otherwise, overheating may occur.

CAUTION!! Do not apply anti-oxidant substance on the terminals before terminals are connected tightly.

CAUTION!! Before making the final DC connection or closing DC breaker/disconnector, be sure positive (+) must be connected to positive (+) and negative (-) must be connected to negative (-).

AC Input/Output Connection

CAUTION!! Before connecting to AC input power source, please install a **separate** AC breaker between inverter and AC input power source. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of AC input. The recommended spec of AC breaker is for 32A for 3.0KW ,40A for 4.0KW.

CAUTION!! There are two terminal blocks with "INPUT"and "OUTPUT"markings. Please do NOT mis-connect input and output connectors.

WARNING! All wiring must be performed by a qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable size as below.


Suggested cable requirement for AC wires

Model	Gauge	Torque Value
3.0KW	10 AWG	1.2~ 1.6 Nm
4.0KW	8 AWG	1.4~ 1.6Nm

Please follow below steps to implement AC input/output connection:

1. Before making AC input/output connection, be sure to open DC protector or disconnector first.
2. Remove insulation sleeve 10mm for six conductors. And shorten phase L and neutral conductor N 3 mm.
3. Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws.

L→LINE (brown or black)
N→Neutral (blue or white)

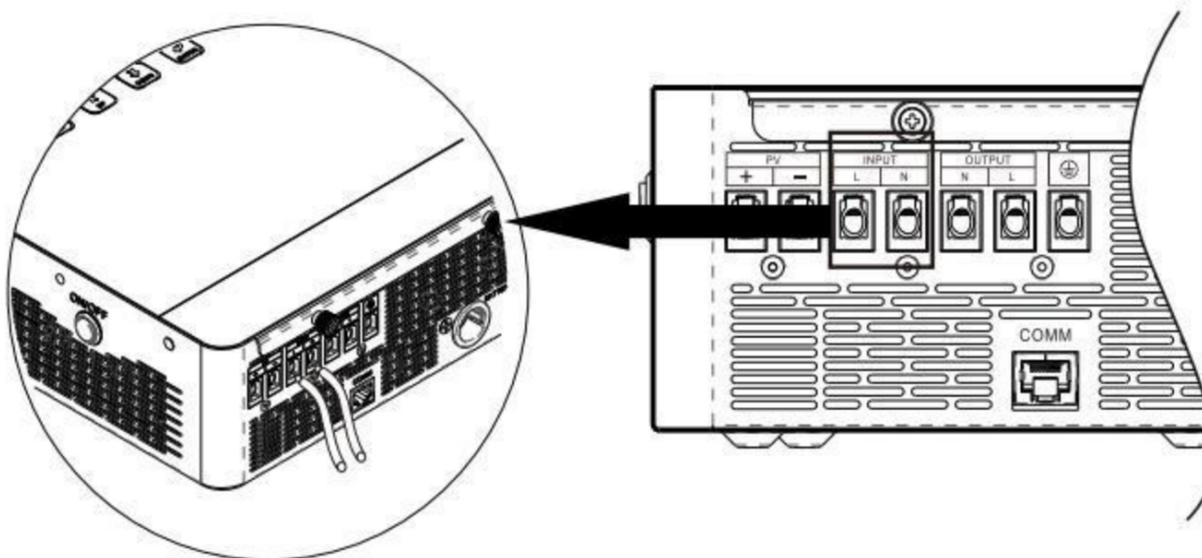

WARNING:


Be sure that AC power source is disconnected before attempting to hardwire it to the unit.

4. Then, insert AC output wires according to polarities indicated on terminal block and tighten terminal screws. Be sure to connect PE protective conductor (⊕) first.

⊕→**Ground (green)**

L→**LINE (brown or black)**

N→**Neutral (blue or white)**

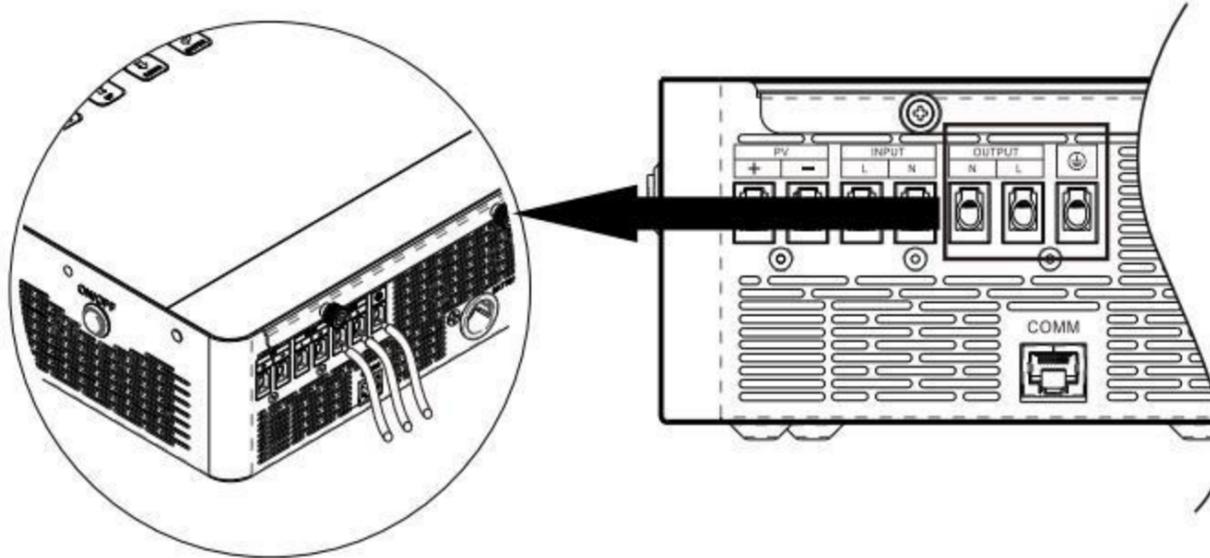

5. Make sure the wires are securely connected.

CAUTION: Important

Be sure to connect AC wires with correct polarity. If L and N wires are connected reversely, it may cause utility short-circuited when these inverters are worked in parallel operation.

CAUTION: Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it's equipped with time-delay function before installation. Otherwise, this inverter/charger will trig overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.

PV Connection

CAUTION: Before connecting to PV modules, please install **separately** a DC circuit breaker between inverter and PV modules.

WARNING! All wiring must be performed by a qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below.

Model	Wire Size	Cable (mm ²)	Torque value (max)
3.0KW/4.0KW	1 x 12AWG	4	1.2 Nm

PV Module Selection:


When selecting proper PV modules, please be sure to consider below parameters:

1. Open circuit Voltage (Voc) of PV modules not exceeds max. PV array open circuit voltage of inverter.
2. Open circuit Voltage (Voc) of PV modules should be higher than min. PV Array MPPT Voltage range.

INVERTER MODEL	3.0KW	4.0KW
Max. PV Array Open Circuit Voltage	350Vdc	
PV Array MPPT Voltage Range	55Vdc~350Vdc	

Please follow below steps to implement PV module connection:


1. Remove insulation sleeve 10 mm for positive and negative conductors.
2. Check correct polarity of connection cable from PV modules and PV input connectors. Then, connect positive pole (+) of connection cable to positive pole (+) of PV input connector. Connect negative pole (-) of connection cable to negative pole (-) of PV input connector.

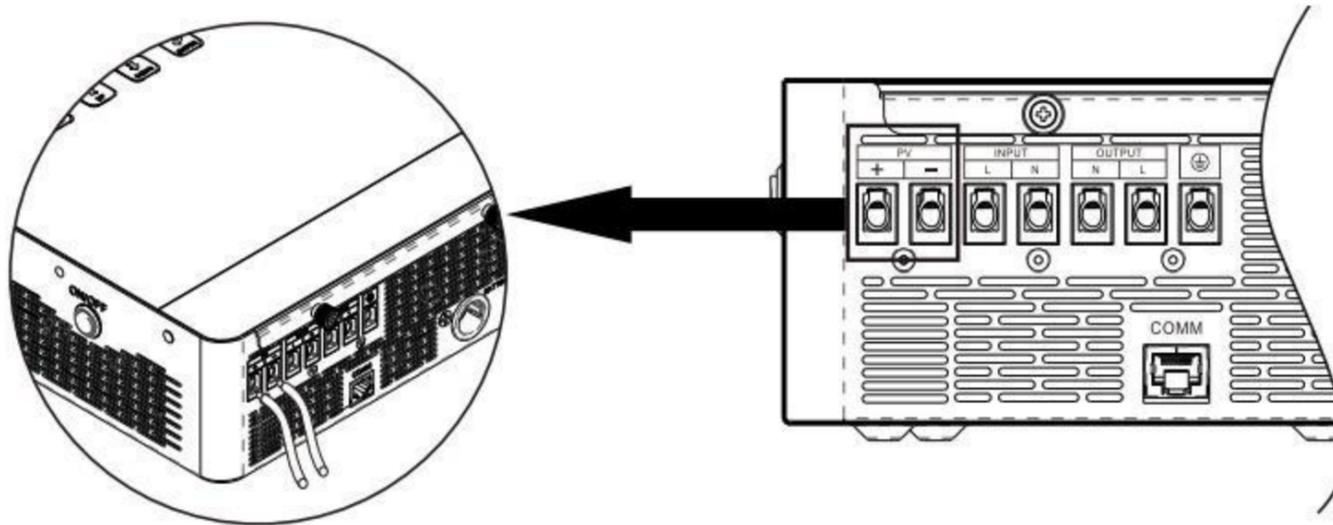

3. Make sure the wires are securely connected.


Final Assembly

After connecting all wirings, please put bottom cover back by screwing two screws as shown below.

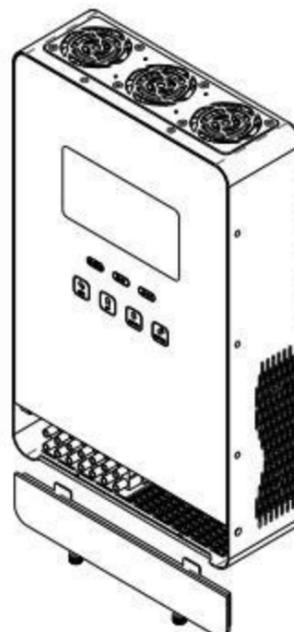

OPERATION


Power ON/OFF

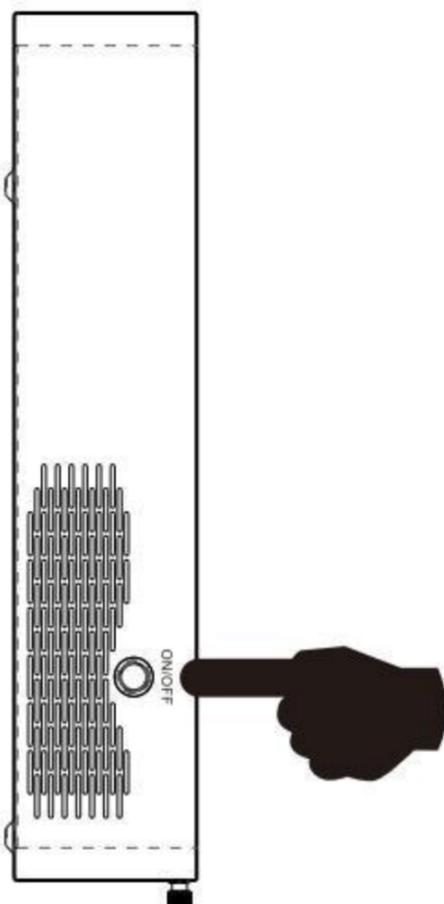

Once the unit has been properly installed and the batteries are connected well, simply press On/Off switch (located on the button of the case) to turn on the unit.

Operation and Display Panel

The operation and display panel, shown in below chart, is on the front panel of the inverter. It includes three indicators, four function keys and a LCD display, indicating the operating status and input/output power information.

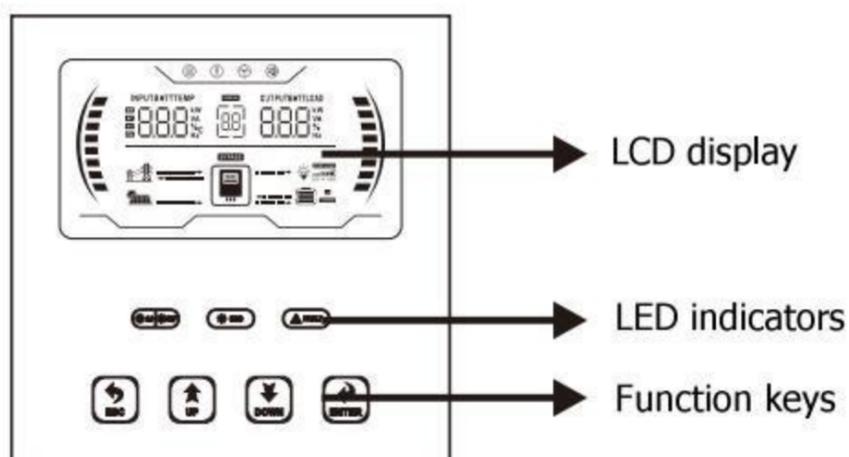


LED Indicator

LED Indicator		Messages	
☀-AC ☀-INV	Green	Solid On	Output is powered by utility in Line mode.
		Flashing	Output is powered by battery or PV in battery mode.
☀-CHG	Green	Solid On	Battery is fully charged.
		Flashing	Battery is charging.
⚠-FAULT	Red	Solid On	Fault occurs in the inverter.
		Flashing	Warning condition occurs in the inverter.


Function Keys

Function Key	Description
ESC	To exit setting mode
UP	To go to previous selection
DOWN	To go to next selection
ENTER	To confirm the selection in setting mode or enter setting mode

LCD Display Icons

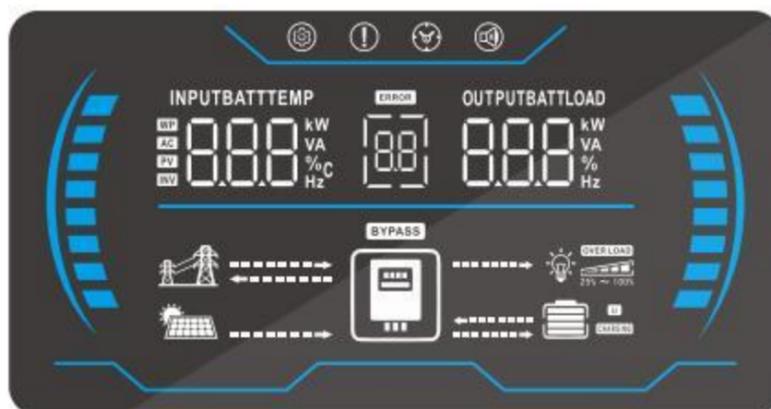

Icon	Function description
Input Source Information	
AC	Indicates the AC input.
PV	Indicates the PV input
INPUTBATTEMP kW VA %C Hz	Indicate input voltage, input frequency, PV voltage, battery voltage and charger current.
Configuration Program and Fault Information	
	Indicates the setting programs.
ERROR 	Indicates the warning and fault codes. Warning:  flashing with warning code.
	Fault:  lighting with fault code
Output Information	
OUTPUTBATTLOAD kW VA % Hz	Indicate output voltage, output frequency, load percent, load in VA, load in Watt and discharging current.
Battery Information	
	Left side flashing bar and battery icon Indicates battery level by 0-20%, 20-40%,40-60% and 80-100% in battery mode and charging status in line mode.

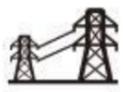Load Information				
	Indicates overload.			
   25% ~ 100%	Right side flashing bar and load icon Indicates the load level by 0-24%,25-50%, 50-75% and 75-100%.			
	0%~25%	25%~50%	50%~75%	75%~100%
				
Mode Operation Information				
	Indicates unit connects to the mains.			
	Indicates unit connects to the PV panel.			
	Indicates load is supplied by utility power.			
	Indicates the utility charger circuit is working.			
	Indicates the DC/AC inverter circuit is working.			
Mute Operation				
	Indicates unit alarm is disabled.			

LCD Setting

After pressing and holding ENTER button for 3 seconds, the unit will enter setting mode. Press "UP" or "DOWN" button to select setting programs. And then, press "ENTER" button to confirm the selection or ESC button to exit.

Setting Programs:

Program	Description	Selectable option
00	Exit setting mode	Escape 00 <u>ESC</u>
01	Output source priority: To configure load power source priority	01 <u>SUB</u> Solar energy provides power to the loads as first priority. If solar energy is out sufficient to power all connected loads, utility energy will supply power to the loads at the same time.
		01 <u>SBU</u> Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, battery energy will supply power to the loads at the same time. Utility provides power to the loads only when battery voltage drops to either low-level warning voltage or the setting point in program 13.
02	Maximum charging current To configure total charging current for solar and utility chargers. (Max. charging current = utility charging current + solar charging current)	10A 02 <u>10^A</u>
		20A 02 <u>20^A</u>
		30A 02 <u>30^A</u>
		40A 02 <u>40^A</u>
		60A 02 <u>60^A</u>
		70A 02 <u>70^A</u>
		80A 02 <u>80^A</u>
		90A 02 <u>90^A</u>
		100A (3.0KW) 02 <u>100^A</u>
		110A 02 <u>110^A</u>
		140A (4.0KW) 02 <u>140^A</u>

03	AC input voltage range	Appliances 03 <u>APL</u>	If selected, acceptable AC input voltage range will be within 90-140VAC.
		UPS (default) 03 <u>UPS</u>	If selected, acceptable AC input voltage range will be within 90-140VAC.
04	Power saving mode enable/disable	Saving mode disable (default) 04 <u>SdS</u>	If disabled, no matter connected load is low or high, the on/off status of inverter output will not be effected.
		Saving mode enable 04 <u>SEn</u>	If enabled, the output of inverter will be off when connected load is pretty low or not detected.
05	Battery type (Notice in battery-free working mode, the vaule cannot be set to LIB or lib-485)	AGM (default) 05 <u>AGn</u>	Flooded 05 <u>FLd</u>
		Lithium battery 05 <u>LIB</u>	After setting to "LIB", the floating charge will be cancelled. If lib is selected, battery charge voltage and low DC cut-off voltage can be set up in program 26 and 29.
		User-Defined 05 <u>USE</u>	If "User-Defined" is selected, battery charge voltage and low DC cut-off voltage can be set up in program 26, 27 and 29.
		Lithium battery with communication <u>LIB</u> 05 <u>485</u> If "485" is selected in program 05, Program 12, 13, 29 will be converted to display SOC.	
06	Auto restart when overload occurs	Restart disable (default) 06 <u>Lfd</u>	Restart enable 06 <u>LfE</u>
07	Auto restart when over temperature occurs	Restart disable 07 <u>tfD</u>	Restart enable (default) 07 <u>tfE</u>
08	Output voltage	120V (default) 08 <u>120</u> ^v	110V 08 <u>110</u> ^v
		100V 08 <u>100</u> ^v	The setting range is 100VAC, 110VAC and 120VAC. non-professionals should not set it by themselves, otherwise it will cause serious consequences
09	Output frequency	50Hz 09 <u>50</u> _{Hz}	60Hz (default) 09 <u>60</u> _{Hz}

11	Maximum utility charging current	10A 11 10A	20A 11 20A
		30A 11 30A	40A 11 40A
		50A 11 50A	60A 11 60A
		70A 11 70A	80A (3.0KW) 11 80A
		110A(4.0KW) 11 110A	
12	<p>Setting voltage point back to utility source when selecting "SBU priority"</p> <p>If "485" is selected in program 05, Program 12, 13, 29 will be converted into a percentage. The default value is 50%. The value ranges from 10% to 50% .</p>	Available options in 24V models:	
		22.0V (Min) 12 ^{BATT} 22.0 _v	22.5V 12 ^{BATT} 22.5 _v
		23.0V (default) 12 ^{BATT} 23.0 _v	23.5V 12 ^{BATT} 23.5 _v
		24.0V 12 ^{BATT} 24.0 _v	24.5V 12 ^{BATT} 24.5 _v
		25.0V 12 ^{BATT} 25.0 _v	25.5V (Max) 12 ^{BATT} 25.5 _v
		Available options in 48V models:	
		44V (Min) 12 ^{BATT} 44.0 _v	45V 12 ^{BATT} 45.0 _v
		46V 12 ^{BATT} 46.0 _v	47V 12 ^{BATT} 47.0 _v
		48V (default) 12 ^{BATT} 48.0 _v	49V 12 ^{BATT} 49.0 _v
		50V 12 ^{BATT} 50.0 _v	51V (Max) 12 ^{BATT} 51.0 _v

13	<p>Setting voltage point back to battery mode when selecting "SBU priority"</p> <p>If "485" is selected in program 05, Program 12, 13, 29 will be converted into a percentage. The default value is 95%. The value ranges from 30% to 100%. Please set this parameter higher than parameter 12.</p>	Available options in 24V models:	
		24V 13 ^{BATT} 24.0 _v	24.5V 13 ^{BATT} 24.5 _v
		25V 13 ^{BATT} 25.0	25.5V 13 ^{BATT} 25.5 _v
		26V 13 ^{BATT} 26.0	26.5V 13 ^{BATT} 26.5 _v
		27V (default) 13 ^{BATT} 27.0 _v	27.5V 13 ^{BATT} 27.5 _v
		28V 13 ^{BATT} 28.0 _v	28.5V 13 ^{BATT} 28.5 _v
		29V 13 ^{BATT} 29.0 _v	
		Available options in 48V models:	
		48V 13 ^{BATT} 48.0	49V 13 ^{BATT} 49.0 _v
		50V 13 ^{BATT} 50.0 _v	51V 13 ^{BATT} 51.0 _v
		52V 13 ^{BATT} 52.0 _v	53V 13 ^{BATT} 53.0 _v
		54V (default) 13 ^{BATT} 54.0 _v	55V 13 ^{BATT} 55.0 _v
		56V 13 ^{BATT} 56.0 _v	57V 13 ^{BATT} 57.0 _v
		58V 13 ^{BATT} 58.0 _v	

16	Charger source priority: To configure charger source priority	If this inverter/charger is working in Line, Standby or Fault mode, charger source can be programmed as below:	
		Solar first 16 <u>CS0</u>	Solar energy will charge battery as first priority. Utility will charge battery only when solar energy is not available.
		Solar and Utility 16 <u>SNU</u>	Solar energy and utility will charge battery at the same time.
		Only Solar 16 <u>OS0</u>	Solar energy will be the only charger source no matter utility is available or not.
If this inverter/charger is working in Battery mode or Power saving mode, only solar energy can charge battery. Solar energy will charge battery if it's available and sufficient.			
17	For factory use only		
18	Alarm control	Alarm on (default) 18 <u>bon</u>	Alarm off 18 <u>bof</u>
19	Auto return to default display screen	Return to default display screen (default) 19 <u>ESP</u>	If selected, no matter how users switch display screen, it will automatically return to default display screen (Input voltage /output voltage) after no button is pressed for 1 minute.
		Stay at latest screen 19 <u>PEP</u>	If selected, the display screen will stay at latest screen user finally switches.
20	Backlight control	Backlight on (default) 20 <u>LON</u>	Backlight off 20 <u>LOF</u>
22	Beeps while primary source is interrupted	Alarm on 22 <u>AON</u>	Alarm off (default) 22 <u>AOF</u>
25	Record Fault code	Record enable(default) 25 <u>FEN</u>	Record disable 25 <u>FDS</u>

26	Bulk charging voltage (C.V voltage)	24V model default setting: 28.2V CU 26 28.2 ^{BATT} v
		48V model default setting: 56.4V CU 26 56.4 ^{BATT} v
		If USE or LIB is selected in program 05, this program can be set up. Setting range is from 24.0V to 29.2V for 24V model and 48.0V to 58.4V for 48V model. Increment of each click is 0.1V.
27	Floating charging voltage Note:If LIB is selected in program 5,this program represents the charging recovery voltage the default setting for the 24V model is 26V the default setting for the 48V model is 52V	24V model default to 27.0V FLU 27 27.0 ^{BATT} v
		48V model default setting: 54.0V FLU 27 54.0 ^{BATT} v
		If USE or LIB is selected in program 05, this program can be set up. Setting range is from 24.0V to 29.2V for 24V model, 48.0V to 58.4V for 48V model. Increment of each click is 0.1V.
29	Low DC cut-off voltage	24V model default setting: 21.0V COV 29 21.0 ^{BATT}
		48V model default setting: 42.0V COV 29 42.0 ^{BATT}
		If "485" is selected in program 5 Program 29 will be converted into a percentage. The default value is 20%. The value ranges from 5% to 30%.
		If USE or LIB is selected in program 05, this program can be set up. Setting range is from 20.0V to 24.0V for 24V model, 40.0V to 48.0V for 48V model. Increment of each click is 0.1V. Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected.
30	Restore default settings	Restore default settings RES 30 ON
		If this option is selected, the Inverter will restore the default settings

33	Battery equalization	<u>EQ 33</u> <u>ON</u>	(default) <u>EQ 33</u> <u>OFF</u>
		If "FLD,USE " is selected in program 05, this program can be set up.	
34	Battery equalization voltage	24V default setting: 29.2V <u>EQV 34</u> <u>29.2</u> ^{BATT}	
		Setting range is from 25.0V to 29.5V. Increment of each click is 0.1V.	
		48V default setting: 58.4V <u>EQV 34</u> <u>58.4</u> ^{BATT}	
		Setting range is from 50 to 59 V. Increment of each click is 0.1V.	
35	Battery equalized time	60min (default) <u>35</u> <u>60</u>	Setting range is from 5min to 900min. Increment of each click is 5min.
36	Battery equalized timeout	120min (default) <u>36</u> <u>120</u>	Setting range is from 5min to 900 min. Increment of each click is 5 min.
37	Equalization interval	30days (default) <u>37</u> <u>30d</u>	Setting range is from 0 to 90 days. Increment of each click is 1 day
39	Equalization activated immediately	Enable <u>39</u> <u>ON</u>	Disable (default) <u>39</u> <u>OFF</u>
		If equalization function is enabled in program 33, this program can be set up. If "Enable" is selected in this program, it's to activate battery equalization immediately and LCD main page will shows "EQ". If "Disable" is selected, it will cancel equalization function until next activated equalization time arrives based on program 37 setting. At this time, "EQ" will not be shown in LCD main page.	

Lithium battery connection

If the inverter is matched with lithium batteries, only lithium batteries that have been matched with the BMS communication protocol are allowed to be used:

Please follow below steps to implement lithium battery connection:

1. Assemble battery ring terminal based on recommended battery cable and terminal specifications.
2. Insert the ring terminal of battery cable flatly into battery connector of inverter and make sure the bolts are tightened with torque of 2-3Nm. Make sure polarity at both the battery and the inverter/charge is correctly connected and ring terminals are tightly screwed to the battery terminals.
3. Connect the RJ45 connector to the COMM port on the inverter.
4. Connect the other end of the RJ45 plug to the battery communication port (RS485). Ensure that the battery signal cable RS485-A is connected to the RS485-A of the COMM port, and the battery signal cable RS485-B is connected to the RS485-B of the COMM port.

Note: If choosing lithium battery, make sure to connect the BMS communication cable between the battery and the inverter. You need to choose battery type as " Lib-485 " mode.


Lithium battery communication and setting

In order to communicate with battery BMS, you should set the battery type to " Lib-485 " in Program 5.

1. Connect the end of RJ45 of battery to BMS communication port of inverter

Ensure that the BMS port of the lithium battery corresponds to the pin of the BMS communication port of the inverter. The pin of the inverter BMS interface is defined as shown in the following figure:

Pin number	definition
1	RX
2	TX
3	VCC
4	VCC
5	RS485-A
6	RS485-B
7	GND
8	GND

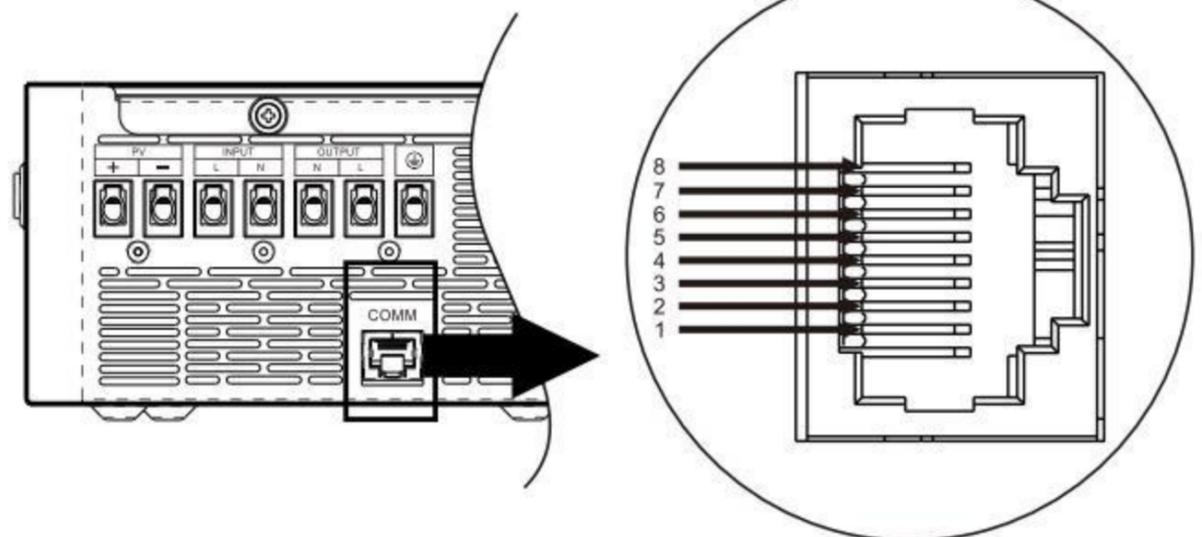

Communication port pin definition

2. When the battery type is set to "Lib-485", the settings of 12,13, and 29 are as follows:

The default charging current is 0.5C

Note: When the battery type is set to "Lib-485", the charge current can't be modified by the user. When the communication is fail, the inverter will cut off output.

12	Setting SOC point back to utility source when selecting SBU in program 01		10%-50% can be set.
13	Setting SOC point back to battery mode when selecting SBU in program 01		30%-100% can be set.
29	SOC shutdown point		5%-30% can be set.

3. After pressing and holding "ESC" button for 3 seconds, Enter the lithium battery page. Lithium battery information display content:

LCD data on the left	LCD data on the right	instruction
Total battery voltage	Remaining battery capacity	
Battery charging current	Battery discharge current	
Battery capacity	Battery charge/discharge times	Warning in the middle
BMS board temperature	Mosfet temperature of BMS board	
Maximum voltage of a single battery cell	Minimum voltage of a single battery cell	
Maximum temperature of a single battery cell	Minimum temperature of a single battery cell	

3.1 Long press ENTER key to enter the setting item and set the 05 item to Lib-485 mode (as shown in the figure below).




Note: When the communication fail, LCD display  code, the inverter will cut off output. If the communication protocol does not match, you can select "LIB" mode.

3.2 Long press the ESC key to enter the lithium battery display interface (as shown in the picture below)



The initial display interface indicate the total battery voltage and remaining battery capacity

4.Detailed description of display interface for lithium battery
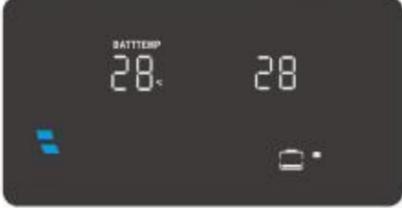
<p>Total battery voltage; Battery remaining capacity (Initial interface display)</p>	<p>Total battery voltage=52.0V Battery remaining capacity=16%</p> 
<p>Battery charging current; Battery discharge current</p>	<p>Battery charging current= 0A Battery discharge current=21A</p> 
<p>Battery capacity; Battery charge/discharge Times</p>	<p>Battery capacity=100Ah Battery charge/discharge Times= 14</p> 
<p>BMS board temperature; MOSFET temperature of BMS board</p>	<p>Battery ambient temperature= 28°C Battery MOSFET temperature=29°C</p> 
<p>Maximum voltage of a single battery cell; Minimum voltage of a single battery cell;</p>	<p>Maximum voltage of a single battery cell=3.25V Minimum voltage of a single battery cell=3.25V</p> 
<p>Maximum temperature of a single battery cell; Minimum temperature of a single battery cell;</p>	<p>Maximum temperature of a single battery cell=28°C Minimum temperature of a single battery cell=28°C</p> 

5.Warning Code

Warning Code	Warning Event	Warning Event
21	Battery cell over voltage	[21]
22	Battery cell low voltage	[22]
23	Battery pack over voltage	[23]
24	Battery pack low voltage	[24]
25	Charging over current	[25]
26	Discharging over current	[26]
27	Charging cell high temperature	[27]
28	Discharging cell high temperature	[28]
29	Charging cell low temperature	[29]
30	Discharging cell low temperature	[30]
31	Environment high temperature	[31]
32	Environment low temperature	[32]
33	MOSFET high temperature	[33]





6.Falut Code

Falut Code	Warning Event	Warning Event
21	Battery cell over voltage	[21]
22	Battery cell low voltage	[22]
23	Battery pack over voltage	[23]
24	Battery pack low voltage	[24]
25	Charging over current	[25]
26	Discharging over current	[26]
27	Charging cell high temperature	[27]
28	Discharging cell high temperature	[28]
29	Charging cell low temperature	[29]
30	Discharging cell low temperature	[30]
31	Environment high temperature	[31]
32	Environment low temperature	[32]
33	MOSFET high temperature	[33]
35	Short circuit	[35]
36	Charger over voltage	[36]

Display Setting

The LCD display information will be switched in turns by pressing "UP" or "DOWN" key. The selectable information is switched as below order: input voltage, input frequency, PV voltage, MPPT charging current, MPPT charging power, battery voltage, output voltage, output frequency, load percentage, load in VA, load in Watt, DC discharging current, main CPU Version.










Selectable information	LCD display
Input voltage/Output voltage (Default Display Screen)	<p>Input Voltage=120V, output voltage=120V</p>
Input frequency	<p>Input frequency=60Hz</p>
PV voltage	<p>PV voltage=350V</p>
MPPT Charging current	<p>Current $\geq 10A$</p> <p>Current < 10A</p>
MPPT Charging power	<p>MPPT charging power=500W</p>

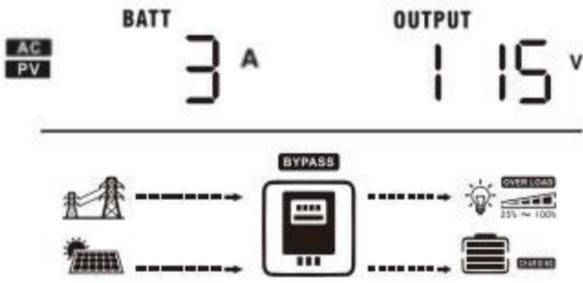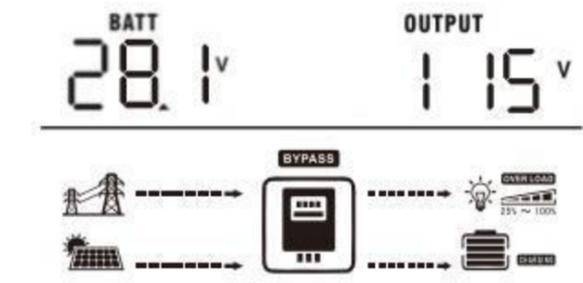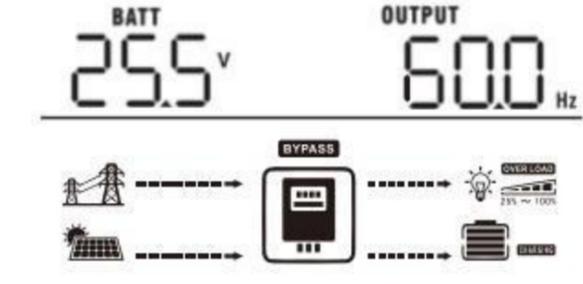
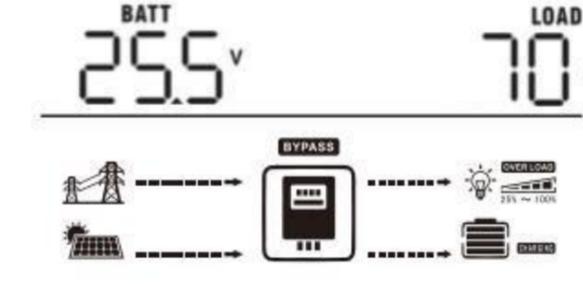
<p>Battery Charging current</p>	<p>Charging current=3A</p> 
<p>Battery voltage</p>	<p>Battery voltage=28.1V</p> 
<p>Output frequency</p>	<p>Output frequency=60Hz</p> 
<p>Load percentage</p>	<p>Load percent=70%</p> 
<p>Load in VA</p>	<p>When connected load is lower than 1kVA, load in VA will present xxxVA like below chart.</p>  <p>When load is larger than 1kVA, load in VA will present x.xkVA like below chart.</p> 

<p>Load in Watt</p>	<p>When load is lower than 1kW, load in W will present xxxW like below chart.</p> <div style="text-align: center;"> </div> <p>When load is larger than 1kW, load in W will present x.xkW like below chart.</p> <div style="text-align: center;"> </div>
<p>Battery discharging current</p>	<p>Discharging current=0A</p> <div style="text-align: center;"> </div>
<p>Main CPU version checking</p>	<p>Main CPU version 88-00</p> <div style="text-align: center;"> </div>

Operating Mode Description

Operation mode	Description	LCD display
<p>Standby mode / Power saving mode</p> <p>Note:</p> <p>*Standby mode: The inverter is not turned on yet but at this time, the inverter can charge battery without AC output.</p> <p>*Power saving mode: If enabled, the output of inverter will be off when connected load is pretty low or not detected.</p>	<p>No output is supplied by the unit but it still can charge batteries.</p>	<p>Charging by utility and PV energy.</p>
		<p>Charging by utility.</p>
		<p>Charging by PV energy.</p>
		<p>No charging.</p>
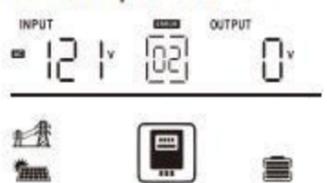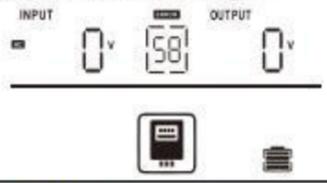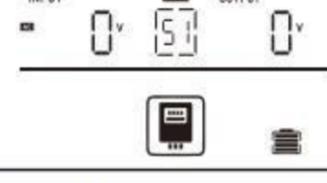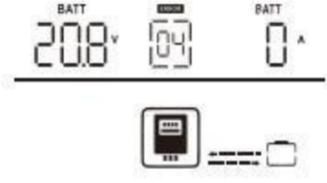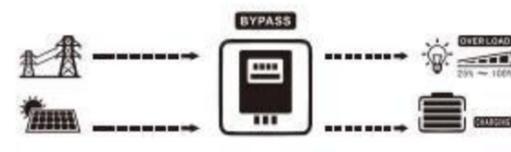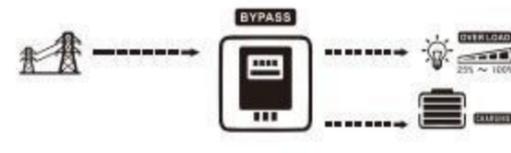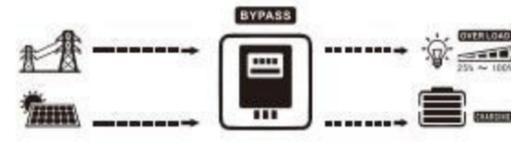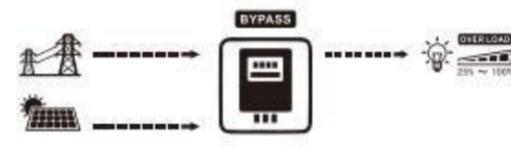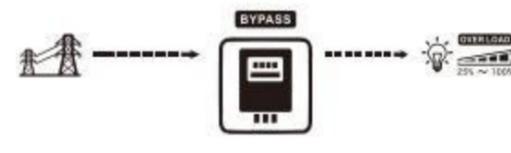
<p>Fault mode</p> <p>Note:</p> <p>*Fault mode: Errors are caused by inside circuit error or external reasons such as over temperature, output short circuited and so on.</p>	<p>The inverter will disconnect all inputs and outputs, such as PV, load, grid, battery.</p> <p>Red fault indicator steady on, buzzer alarm.</p>	<p>Over-temperature</p>  <p>Output low voltage</p>  <p>Output overcurrent</p>  <p>Battery low</p> 
<p>Line Mode</p>	<p>The unit will provide output power from the mains. It will also charge the battery at line mode.</p>	<p>Charging by utility and PV energy.</p> 
		<p>Charging by utility.</p> 
	<p>The unit will provide output power from the mains. It will also charge the battery at line mode.</p>	<p>If "SUB" is selected as output source priority and solar energy is not sufficient to provide the load, solar energy and the utility will provide the loads and charge the battery at the same time.</p> 
		<p>If "SUB" is selected as output source priority and battery is not connected, solar energy and the utility will provide the loads.</p> 
		<p>Power from utility.</p> 
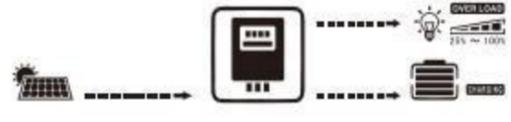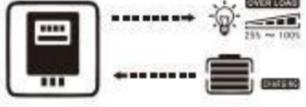
<p>Battery Mode</p>	<p>The unit will provide output power from battery and PV power.</p>	<p>Power from battery and PV energy.</p>  <p>The diagram shows a PV panel on the left with an arrow pointing to a central battery/inverter unit. From this unit, two arrows point to the right: one to a light bulb labeled 'OVER LOAD 25% ~ 100%' and another to a battery icon labeled 'CHARGE'.</p>
		<p>PV energy will supply power to the loads and charge battery at the same time.</p>  <p>The diagram shows a PV panel on the left with an arrow pointing to a central battery/inverter unit. From this unit, two arrows point to the right: one to a light bulb labeled 'OVER LOAD 25% ~ 100%' and another to a battery icon labeled 'CHARGE'.</p>
		<p>Power from battery only.</p>  <p>The diagram shows a central battery/inverter unit with an arrow pointing to a light bulb labeled 'OVER LOAD 25% ~ 100%'. A battery icon labeled 'CHARGE' is positioned below the unit with an arrow pointing towards it.</p>
		<p>Power from PV energy only.</p>  <p>The diagram shows a PV panel on the left with an arrow pointing to a central battery/inverter unit. From this unit, an arrow points to a light bulb labeled 'OVER LOAD 25% ~ 100%'.</p>

Battery Equalization Description

Equalization function is added into charge controller. It reverses the buildup of negative chemical effects like stratification, a condition where acid concentration is greater at the bottom of the battery than at the top. Equalization also helps to remove sulfate crystals that might have built up on the plates. If left unchecked, this condition, called sulfation, will reduce the overall capacity of the battery. Therefore, it's recommended to equalize battery periodically.


- **How to Apply Equalization Function**

You must enable battery equalization function in monitoring LCD setting program 33 first. Then, you may apply this function in device by either one of following methods:

1. Setting equalization interval in program 37.
2. Active equalization immediately in program 39.


- **When to Equalize**

In float stage, when the setting equalization interval (battery equalization cycle) is arrived, or equalization is active immediately, the controller will start to enter Equalize stage.

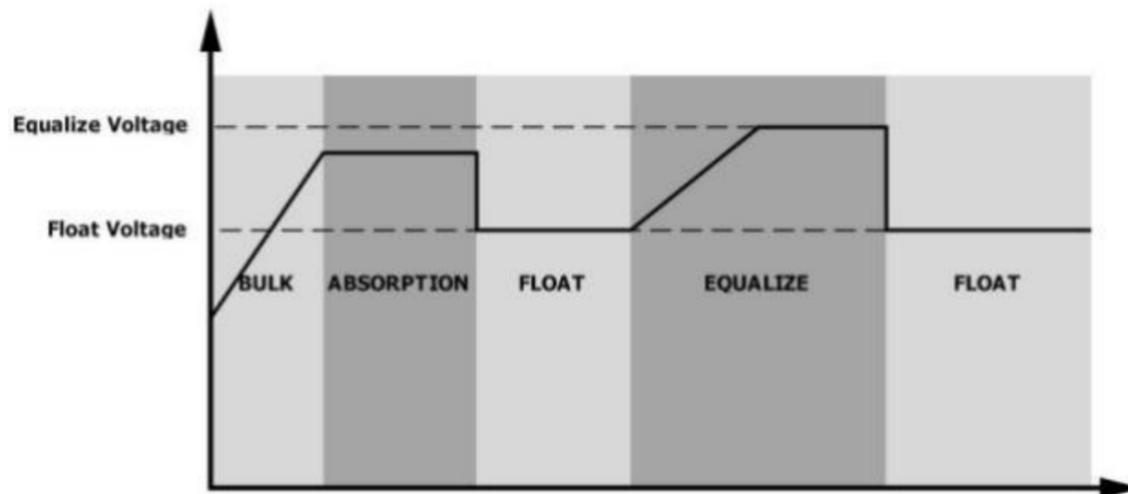


- **Equalize charging time and timeout**

In Equalize stage, the controller will supply power to charge battery as much as possible until battery voltage raises to battery equalization voltage. Then, constant-voltage regulation is applied to maintain battery voltage at the battery equalization voltage. The battery will remain in the Equalize stage until setting battery equalized time is arrived.

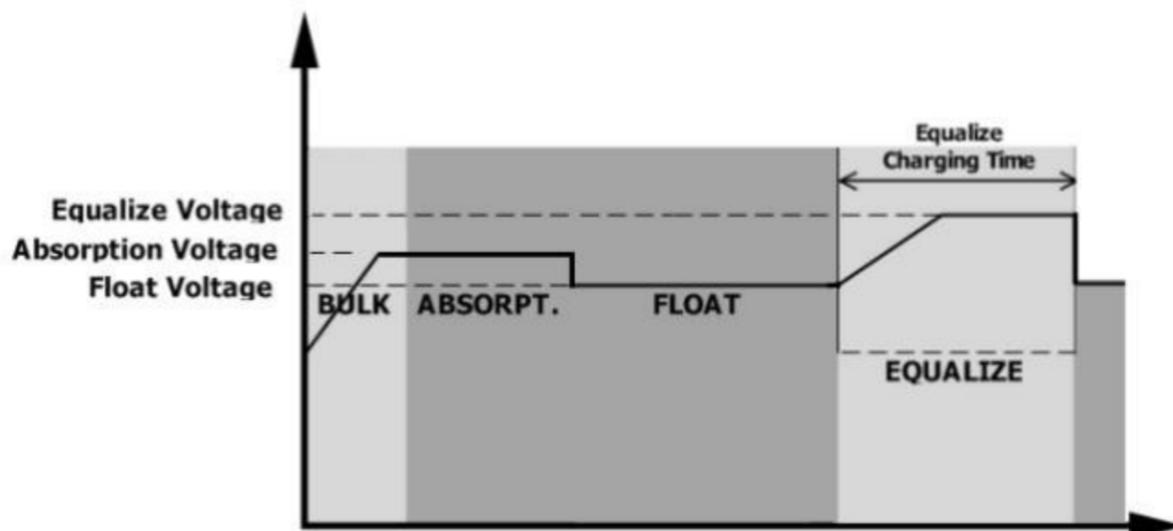

However, in Equalize stage, when battery equalized time is expired and battery voltage doesn't rise to battery equalization voltage point, the charge controller will extend the battery equalized time until battery voltage achieves battery equalization voltage. If battery voltage is still lower than battery equalization voltage when battery equalized timeout setting is over, the charge controller will stop equalization and return to float stage.

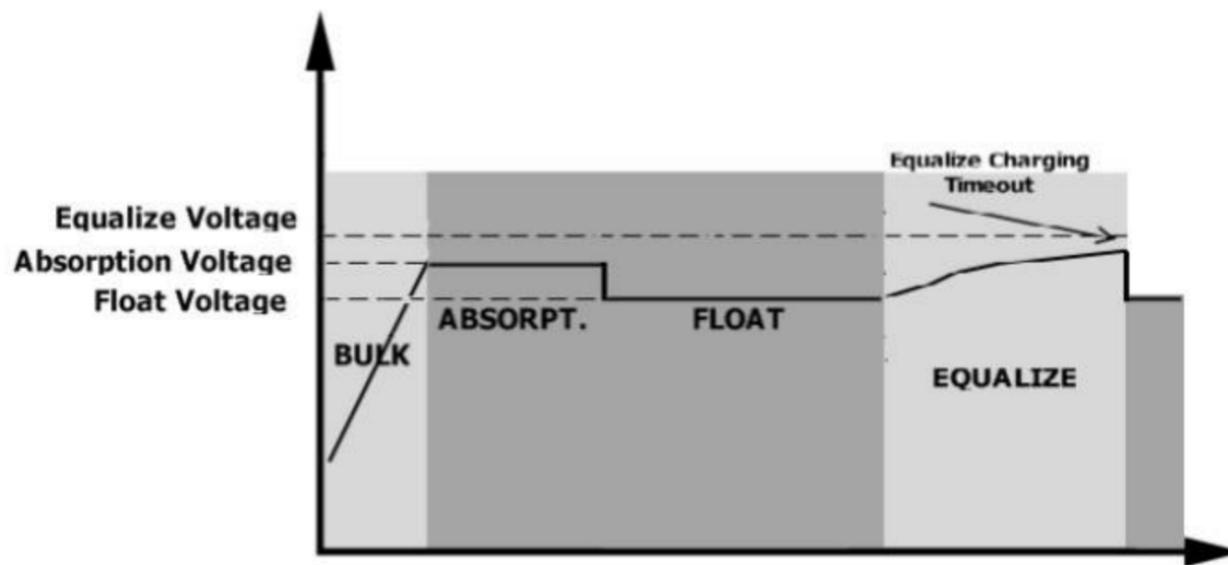

Fault Reference Code

Fault Code	Fault Event	Icon on
01	Fan is locked when inverter is off.	
02	Over temperature	
03	Battery voltage is too high	
04	Battery voltage is too low	
05	Output short circuited or over temperature is detected by internal converter components.	
06	Output voltage is too high.	
07	Overload time out	
08	Bus voltage is too high	
09	Bus soft start failed	
11	Main relay failed	
51	Over current or surge	
52	Bus voltage is too low	
53	Inverter soft start failed	
55	Over DC voltage in AC output	
56	Battery connection is open	
57	Current sensor failed	
58	Output voltage is too low	

Warning Indicator

Warning Code	Warning Event	Audible Alarm	Icon flashing
01	Fan is locked when inverter is on.	Beep twice every second	
03	Battery is over-charged	Beep twice every second	
04	Low battery	Beep twice every second	
07	Overload	Beep twice every second	
10	Output power derating	Beep twice every second	
12	Solar charger stops due to low battery.		
13	Solar charger stops due to high PV voltage.		
14	Solar charger stops due to overload.		
15	PV is weak		
61	When the battery communication is abnormal, stop charging and discharging.		

SPECIFICATIONS

Table 1 Line Mode Specifications

INVERTER MODEL	3.0KW/24V	4.0KW/24V
Input Voltage Waveform	Sinusoidal (utility or generator)	
Nominal Input Voltage	120Vac	
Low Loss Voltage	95Vac±5V(UPS); 65Vac±7V(Appliances)	
Low Loss Return Voltage	100Vac±5V(UPS); 70Vac±5V(Appliances)	
High Loss Voltage	140Vac±5V	
High Loss Return Voltage	135Vac±5V	
Max AC Input Voltage	150Vac	
Nominal Input Frequency	50Hz / 60Hz (It can be set in program 09)	
Low Loss Frequency	45±1Hz/55±1Hz	
Low Loss Return Frequency	47±1Hz/57±1Hz	
High Loss Frequency	55±1Hz/65±1Hz	
High Loss Return Frequency	53±1Hz/63±1Hz	
Output Short Circuit Protection	Line mode: Circuit Breaker Battery mode: Electronic Circuits	
Efficiency (Line Mode)	>95% (Rated R load, battery full charged)	
Transfer Time	10ms typical (UPS); 20ms typical (Appliances)	

Table 2 Inverter Mode Specifications

INVERTER MODEL	3.0KW/24V	4.0KW/24V
Rated Output Power	3.0KW	4.0KW
Output Voltage Waveform	Pure Sine Wave	
Output Voltage Regulation	120Vac±5%	
Output Frequency	60Hz or 50Hz	
Peak Efficiency	94%	
Overload Protection	5s@≥150% load; 10s@110%~150% load	
Surge Capacity	2* rated power for 5 seconds	
Nominal DC Input Voltage	24Vdc	
Cold Start Voltage	23.0Vdc	
Low DC Warning Voltage	22.0Vdc	
Low DC Warning Return Voltage	23.0Vdc	
Low DC Cut-off Voltage	21.0Vdc	
High DC Recovery Voltage	29Vdc	
High DC Cut-off Voltage	31Vdc	
No Load Power Consumption	<35W	

Table 3 Charge Mode Specifications

Utility Charging Mode		
INVERTER MODEL	3.0KW/24V	4.0KW/24V
Charging Current (UPS) @ Nominal Input Voltage	80A	110A
Bulk Charging Voltage	Flooded Battery	29.2Vdc
	AGM / Gel Battery	28.2Vdc
Floating Charging Voltage	27Vdc	
Charging Algorithm	3-Step	
Charging Curve		

Solar Charging Mode		
INVERTER MODEL	3.0KW/24V	4.0KW/24V
Rated Power	5600W	
PV Charge Current	100A	140A
Efficiency	98.0% max.	
Max. PV Array Open Circuit Voltage	350Vdc	
PV Array MPPT Voltage Range	55-350Vdc	
Standby Power Consumption	2W	
Battery Voltage Accuracy	+/-0.3%	
PV Voltage Accuracy	+/-2V	
Charging Algorithm	3-Step	

Table 4 General Specifications

INVERTER MODEL	3.0KW/24V	4.0KW/24V
Safety Certification	CE	
Operating Temperature Range	0°C to 55°C	
Storage temperature	-15°C~ 60°C	
Dimension (D*W*H), mm	400*250*89mm	
Net Weight, kg	7.5kg	8.5kg

TROUBLE SHOOTING

Problem	LCD/LED/Buzzer	Explanation / Possible cause	What to do
Unit shuts down automatically during startup process.	LCD/LEDs and buzzer will be active for 3 seconds and then complete off.	The battery voltage is too low (<1.91V/Cell)	1. Re-charge battery. 2. Replace battery.
No response after power on.	No indication.	1. The battery voltage is far too low. (<1.4V/Cell) 2. Battery polarity is connected reversed.	1. Check if batteries and the wiring are connected well. 2. Re-charge battery. 3. Replace battery.
Mains exist but the unit works in battery mode.	Input voltage is displayed as 0 on the LCD and green LED is flashing.	Input protector is tripped	Check if AC breaker is tripped and AC wiring is connected well.
	Green LED is flashing.	Insufficient quality of AC power. (Shore or Generator)	1. Check if AC wires are too thin and/or too long. 2. Check if generator (if applied) is working well or if input voltage range setting is correct. (UPS→Appliance)
	Green LED is flashing.	Set "Solar First" as the priority of output source.	Change output source priority to Utility first.
When the unit is turned on, internal relay is switched on and off repeatedly.	LCD display and LEDs are flashing	Battery is disconnected.	Check if battery wires are connected well.
Buzzer beeps continuously and red LED is on.	Fault code 07	Overload error. The inverter is overload 110% and time is up.	Reduce the connected load by switching off some equipment.
	Fault code 05	Output short circuited.	Check if wiring is connected well and remove abnormal load.
		Temperature of internal converter component is over 120°C.	Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.
	Fault code 02	Internal temperature of inverter component is over 100°C.	
	Fault code 03	Battery is over-charged.	Return to repair center.
		The battery voltage is too high.	Check if spec and quantity of batteries are meet requirements.
	Fault code 01	Fan fault	Replace the fan.
	Fault code 06/58	Output abnormal (Inverter voltage below than 190Vac or is higher than 260Vac)	1. Reduce the connected load. 2. Return to repair center
	Fault code 08/09/53/57	Internal components failed.	Return to repair center.
	Fault code 51	Over current or surge.	Restart the unit, if the error happens again, please return to repair center.
	Fault code 52	Bus voltage is too low.	
Fault code 55	Output voltage is unbalanced.		
Fault code 56	Battery is not connected well or fuse is burnt.	If the battery is connected well, please return to repair center.	

Appendix: Approximate Back-up Time Table

Model	Load (W)	Backup Time @ 24Vdc 100Ah (min)	Backup Time @ 24Vdc 200Ah (min)
4.0KW	300	449	1100
	600	222	525
	900	124	303
	1200	95	227
	1500	68	164
	1800	56	126
	2100	48	108
	2400	35	94
	2700	31	74
	3200	28	67

Note: Backup time depends on the quality of the battery, age of battery and type of battery.
Specifications of batteries may vary depending on different manufacturers.

*** Product technical specifications are subject to change without notice.**